 
 


Скрин за дрехи Cosmos

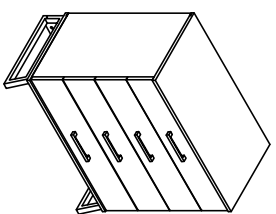




Списък с елементи

317	002	001 6 MM 1 бр.	004 8x30 MM 32 бр.	020 16 бр.
120 6.3*13 MM 24 бр.	406 8 бр.	391 4 комплекта	238 M6*35 MM 4 бр.	011 3.5x25 MM 8 бр.
213 M6*70 MM 2 бр.	510 2 бр.	515 2 бр.	513 4 бр.	115 M4*23 MM 8 бр.
131 4 MM 1 бр.				

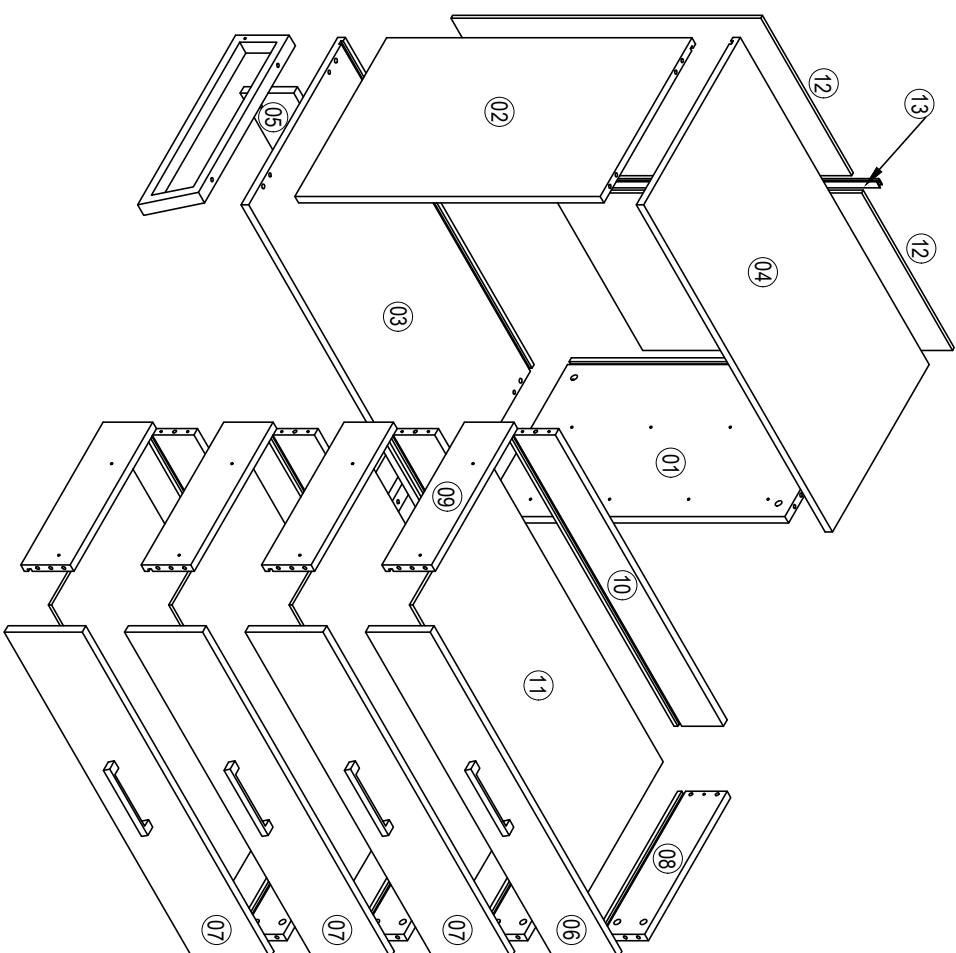


NO	БРОЙ	РАЗМЕР	NO	БРОЙ	РАЗМЕР
01	1	740 X 445	11	4	842 X 387
02	1	740 X 445	12	2	751 X 441
03	1	916 X 469	12	1	740 X 26
04	1	916 X 469			
05	1	846 X 130			
06	1	912 X 157			
07	3	912 X 189			
08	4	400 X 120			
09	4	400 X 120			
10	4	832 X 120			







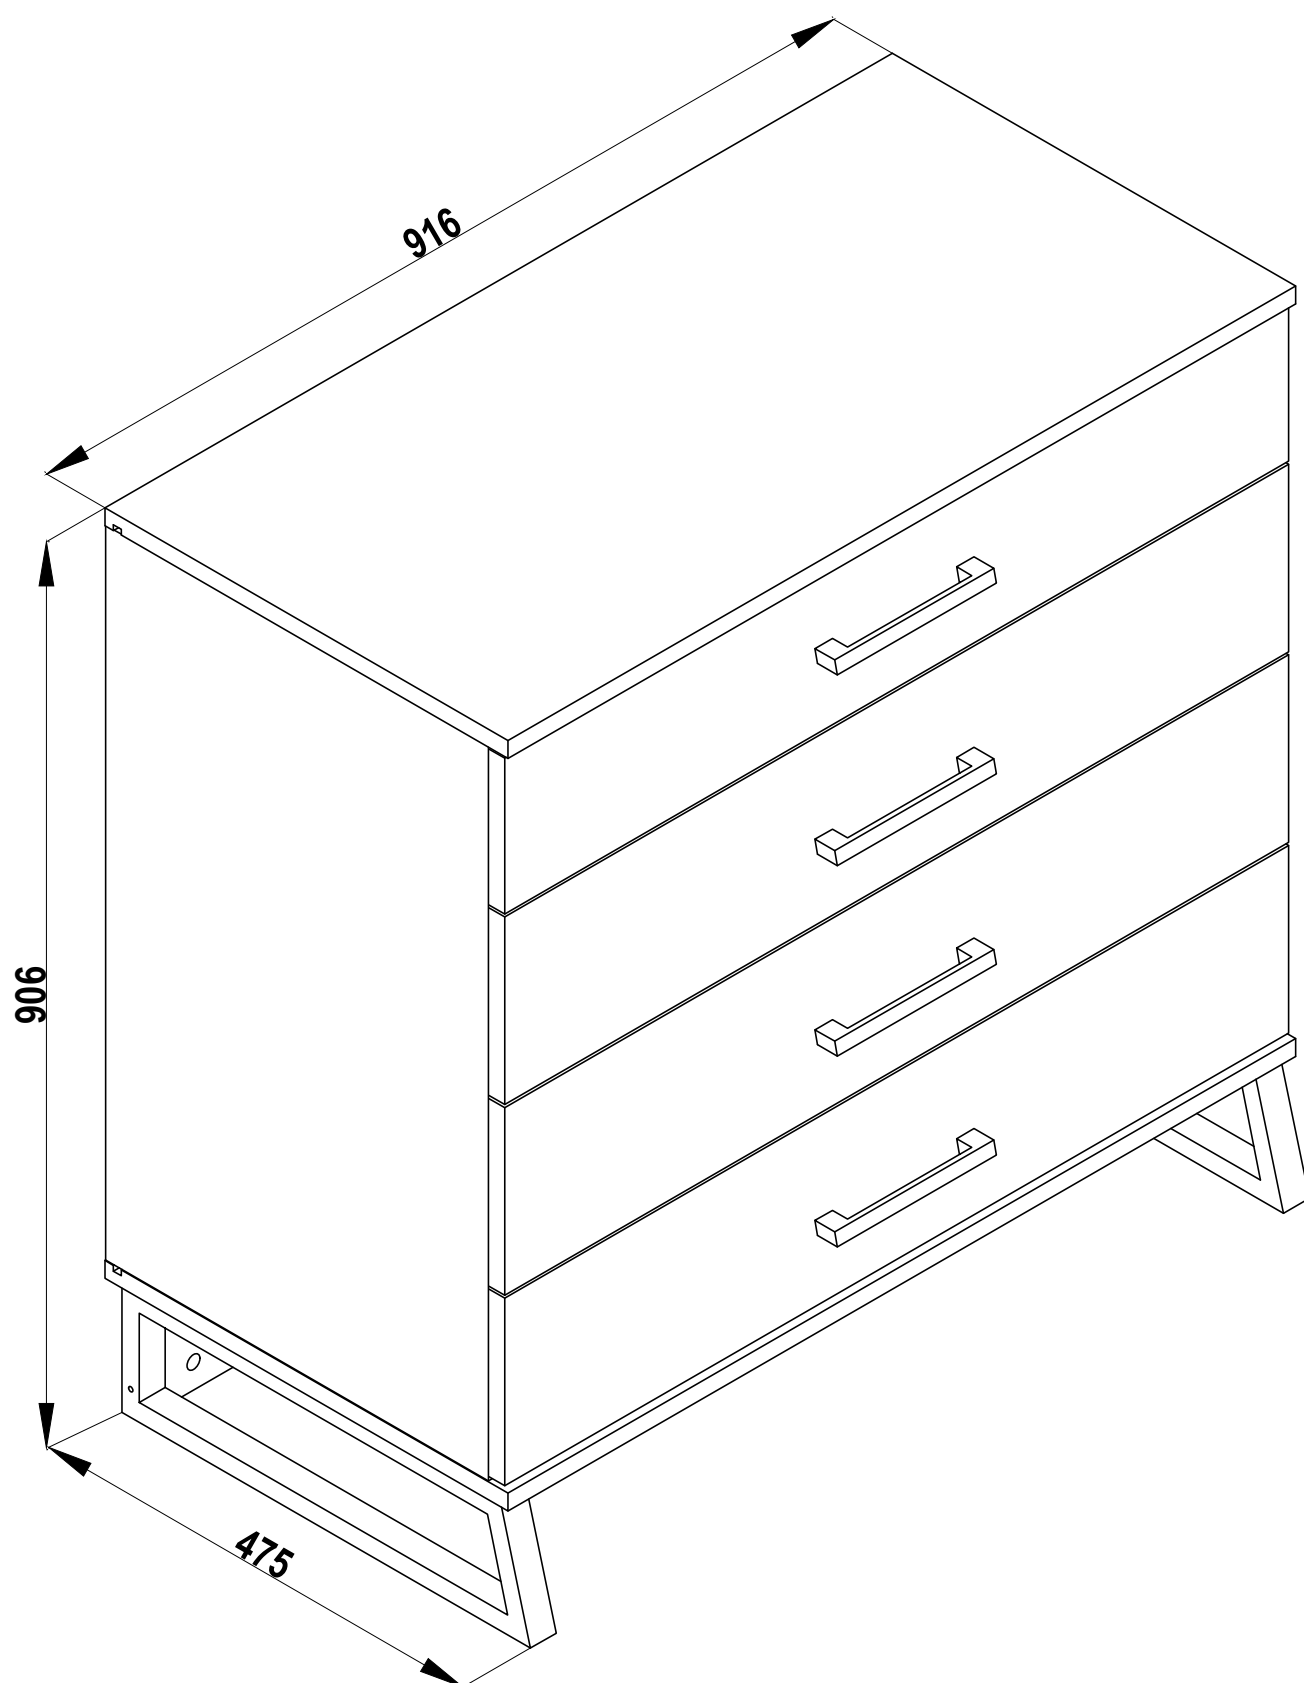 


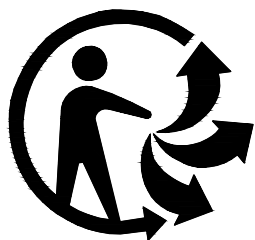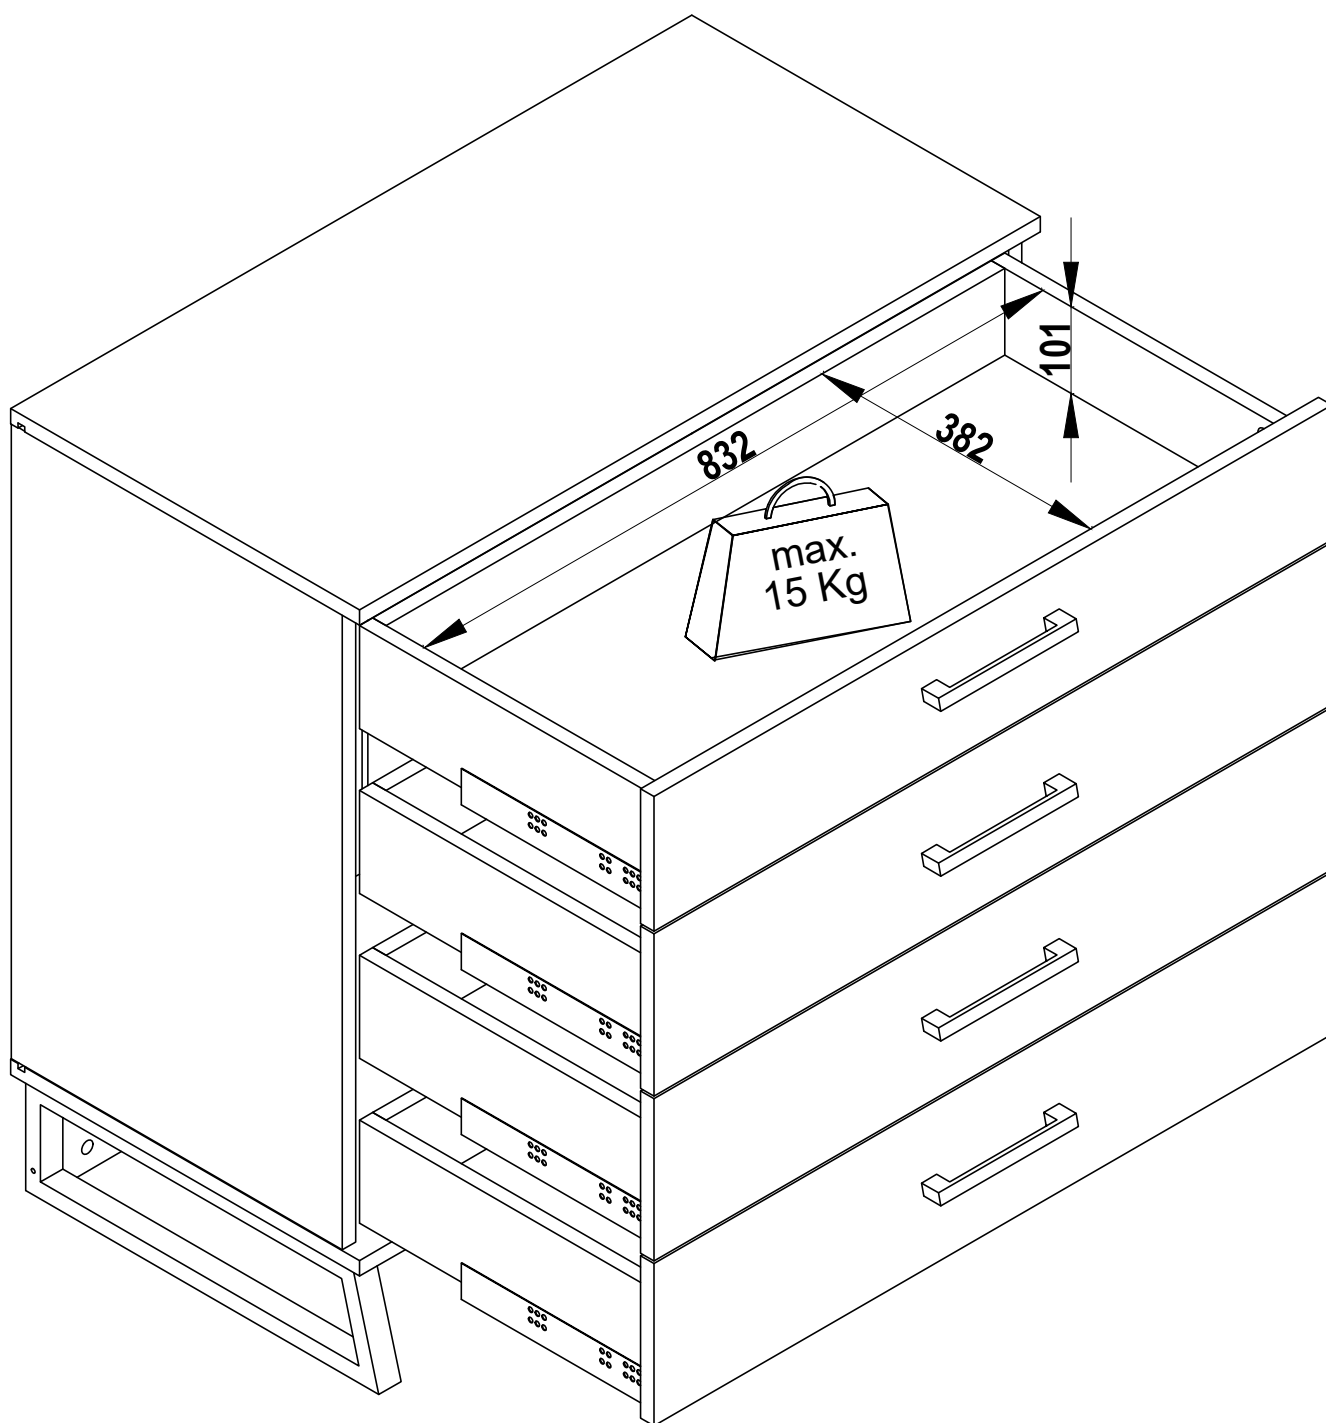  






1

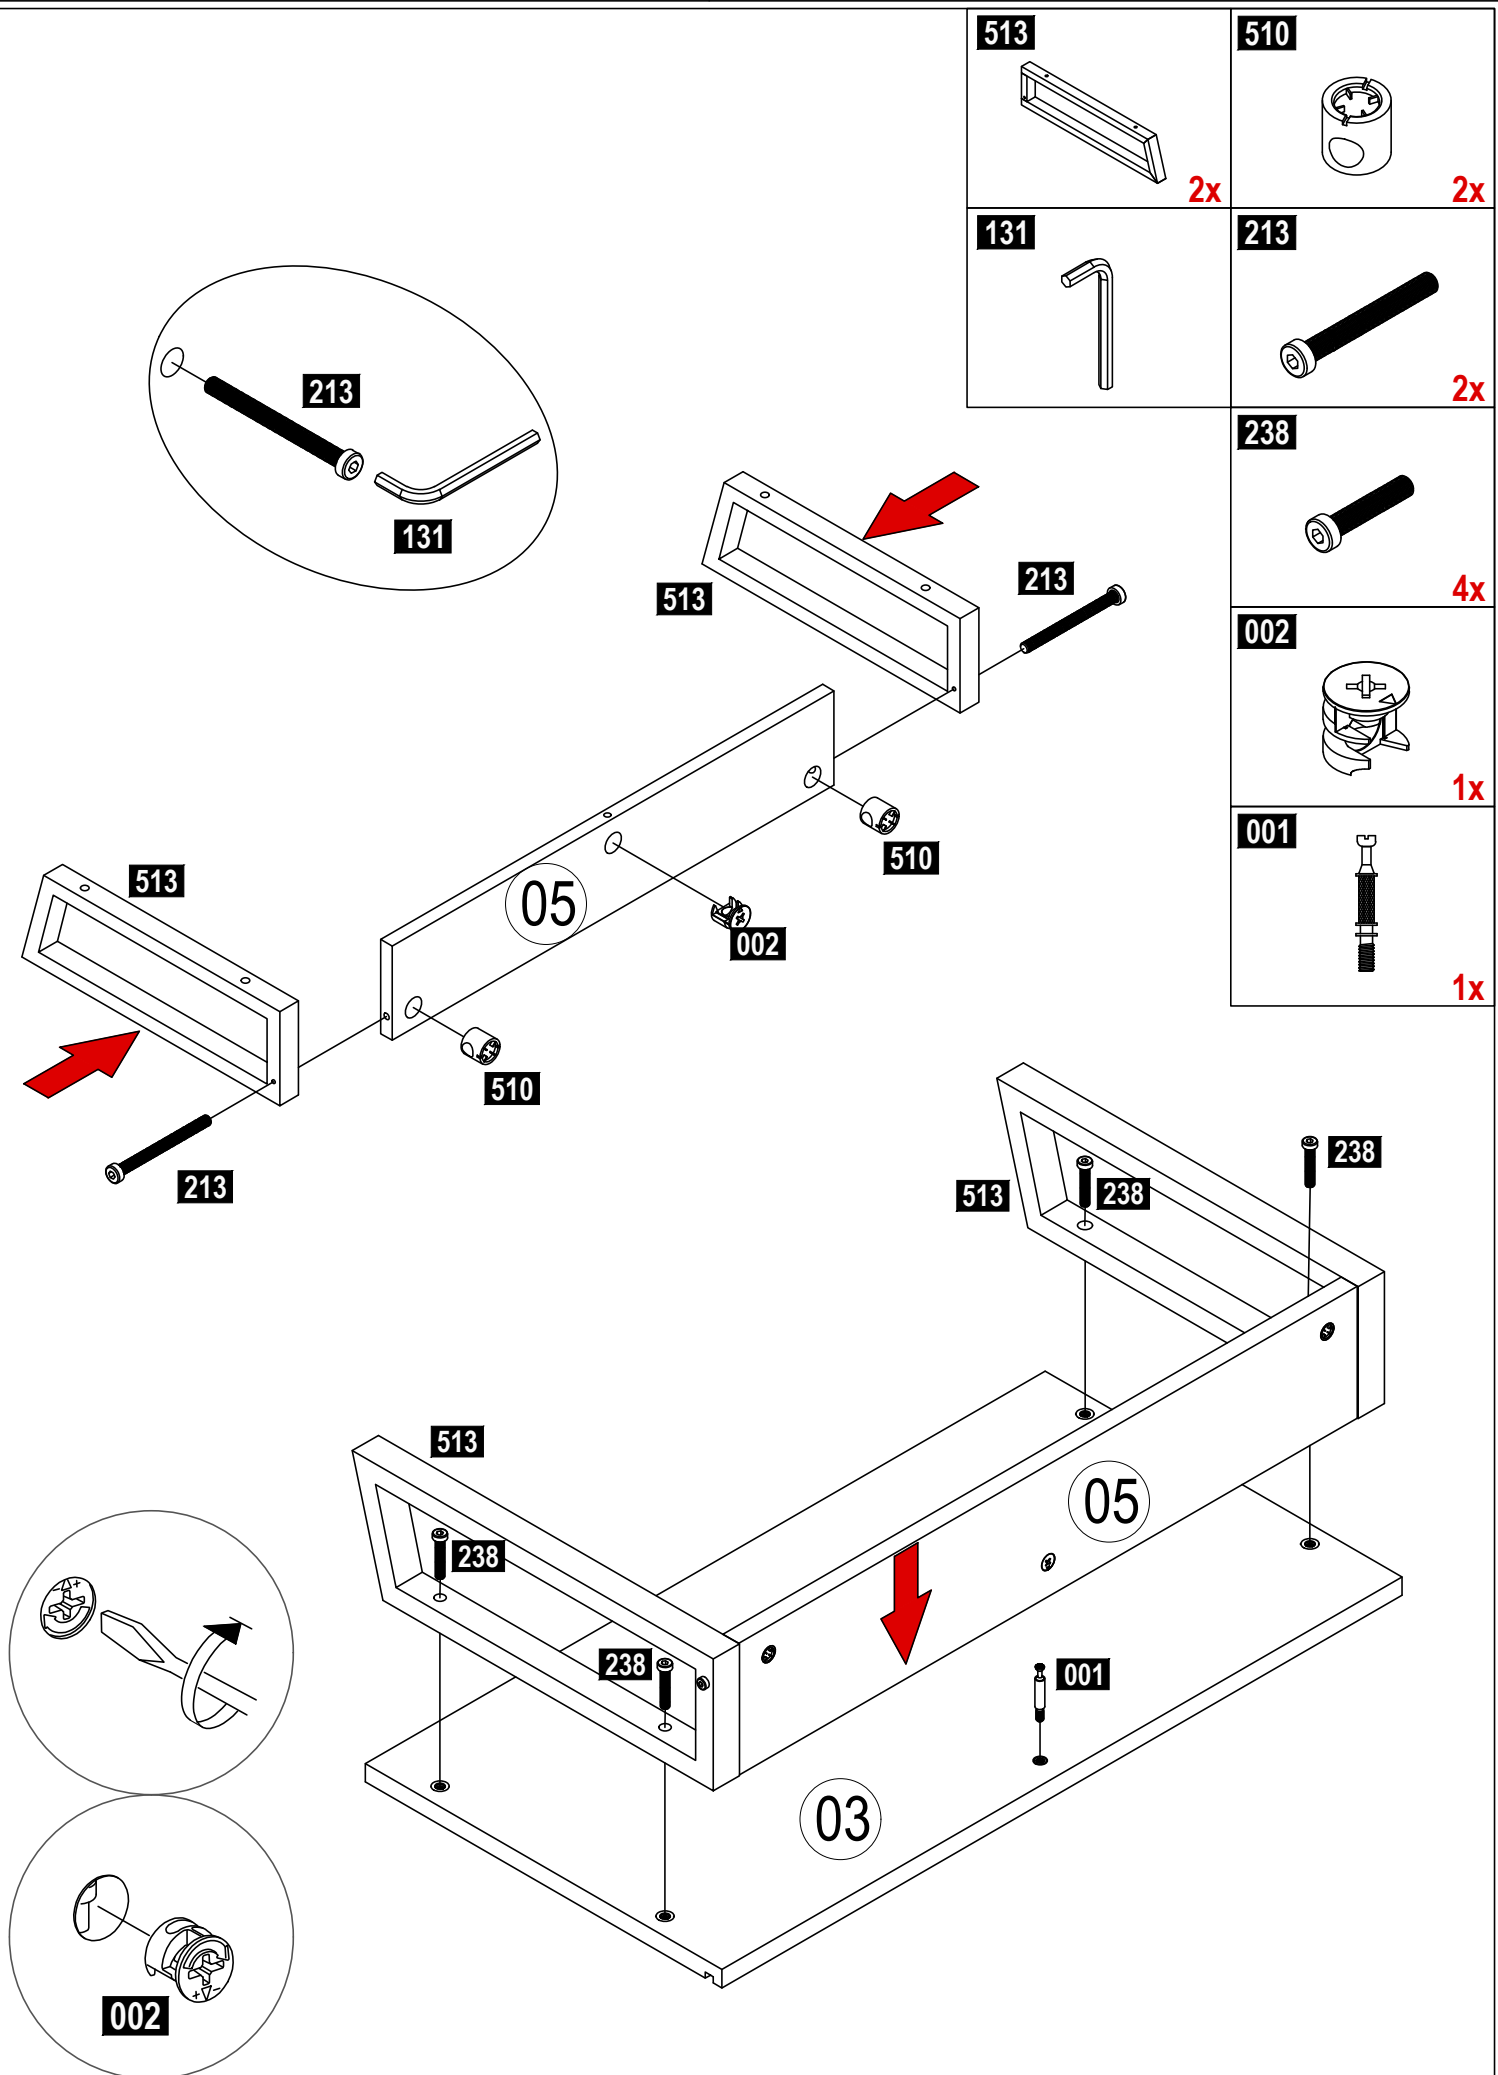 




2

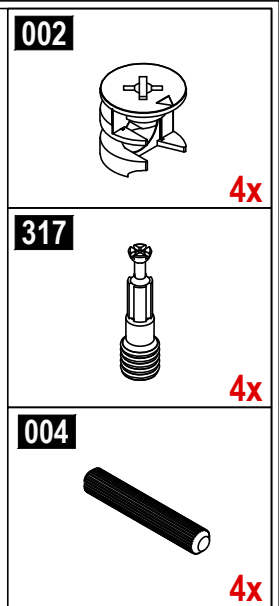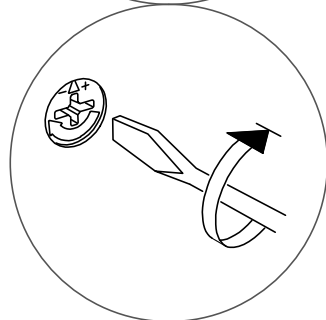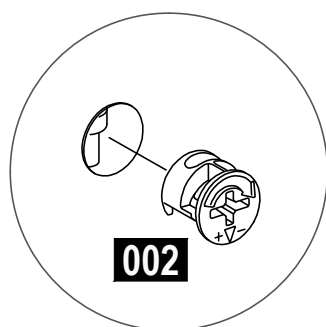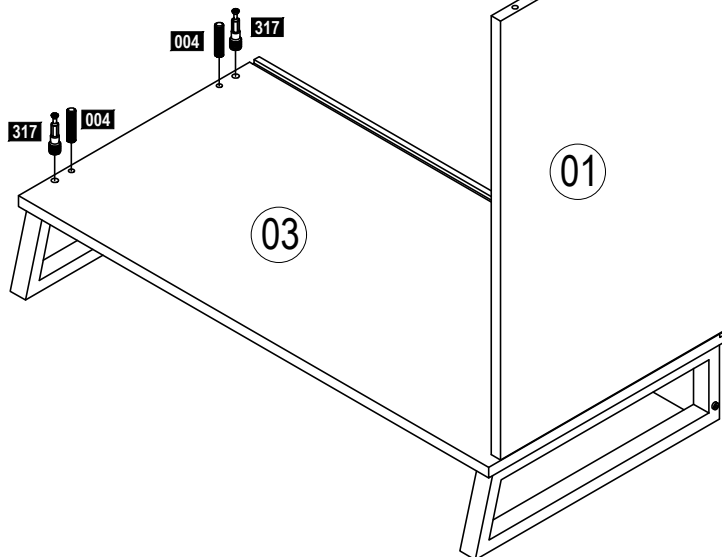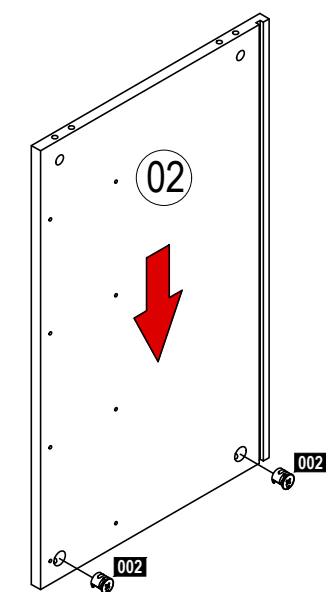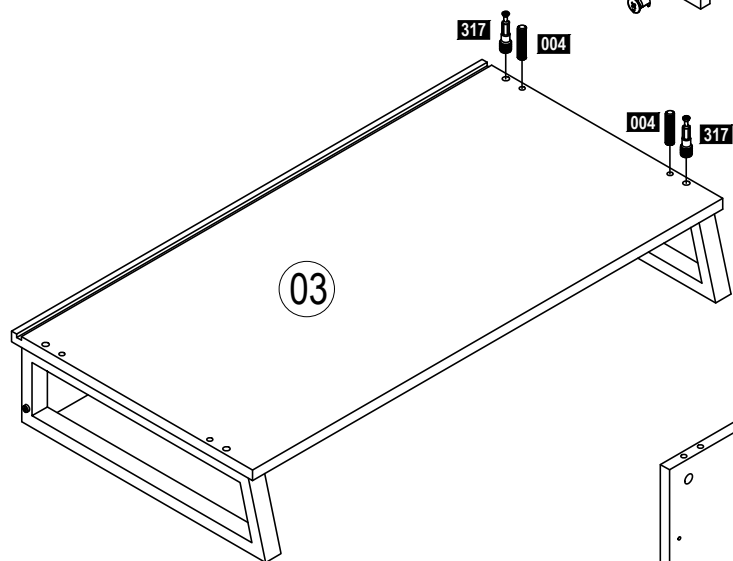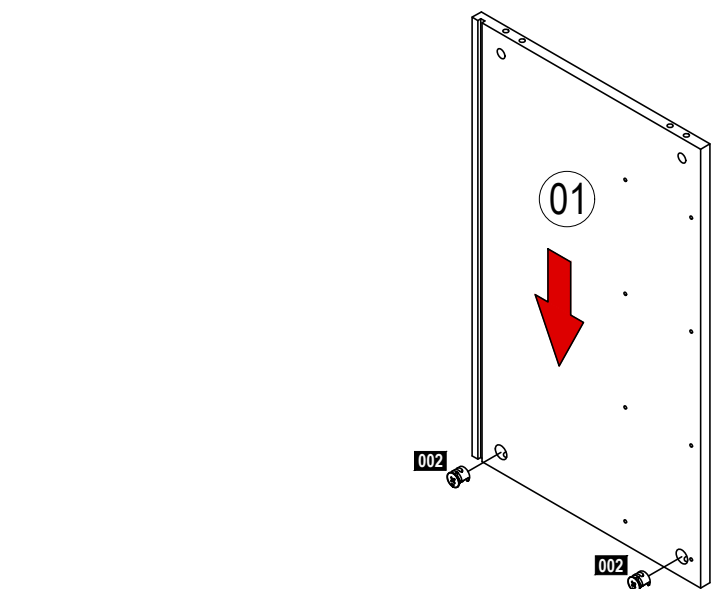       




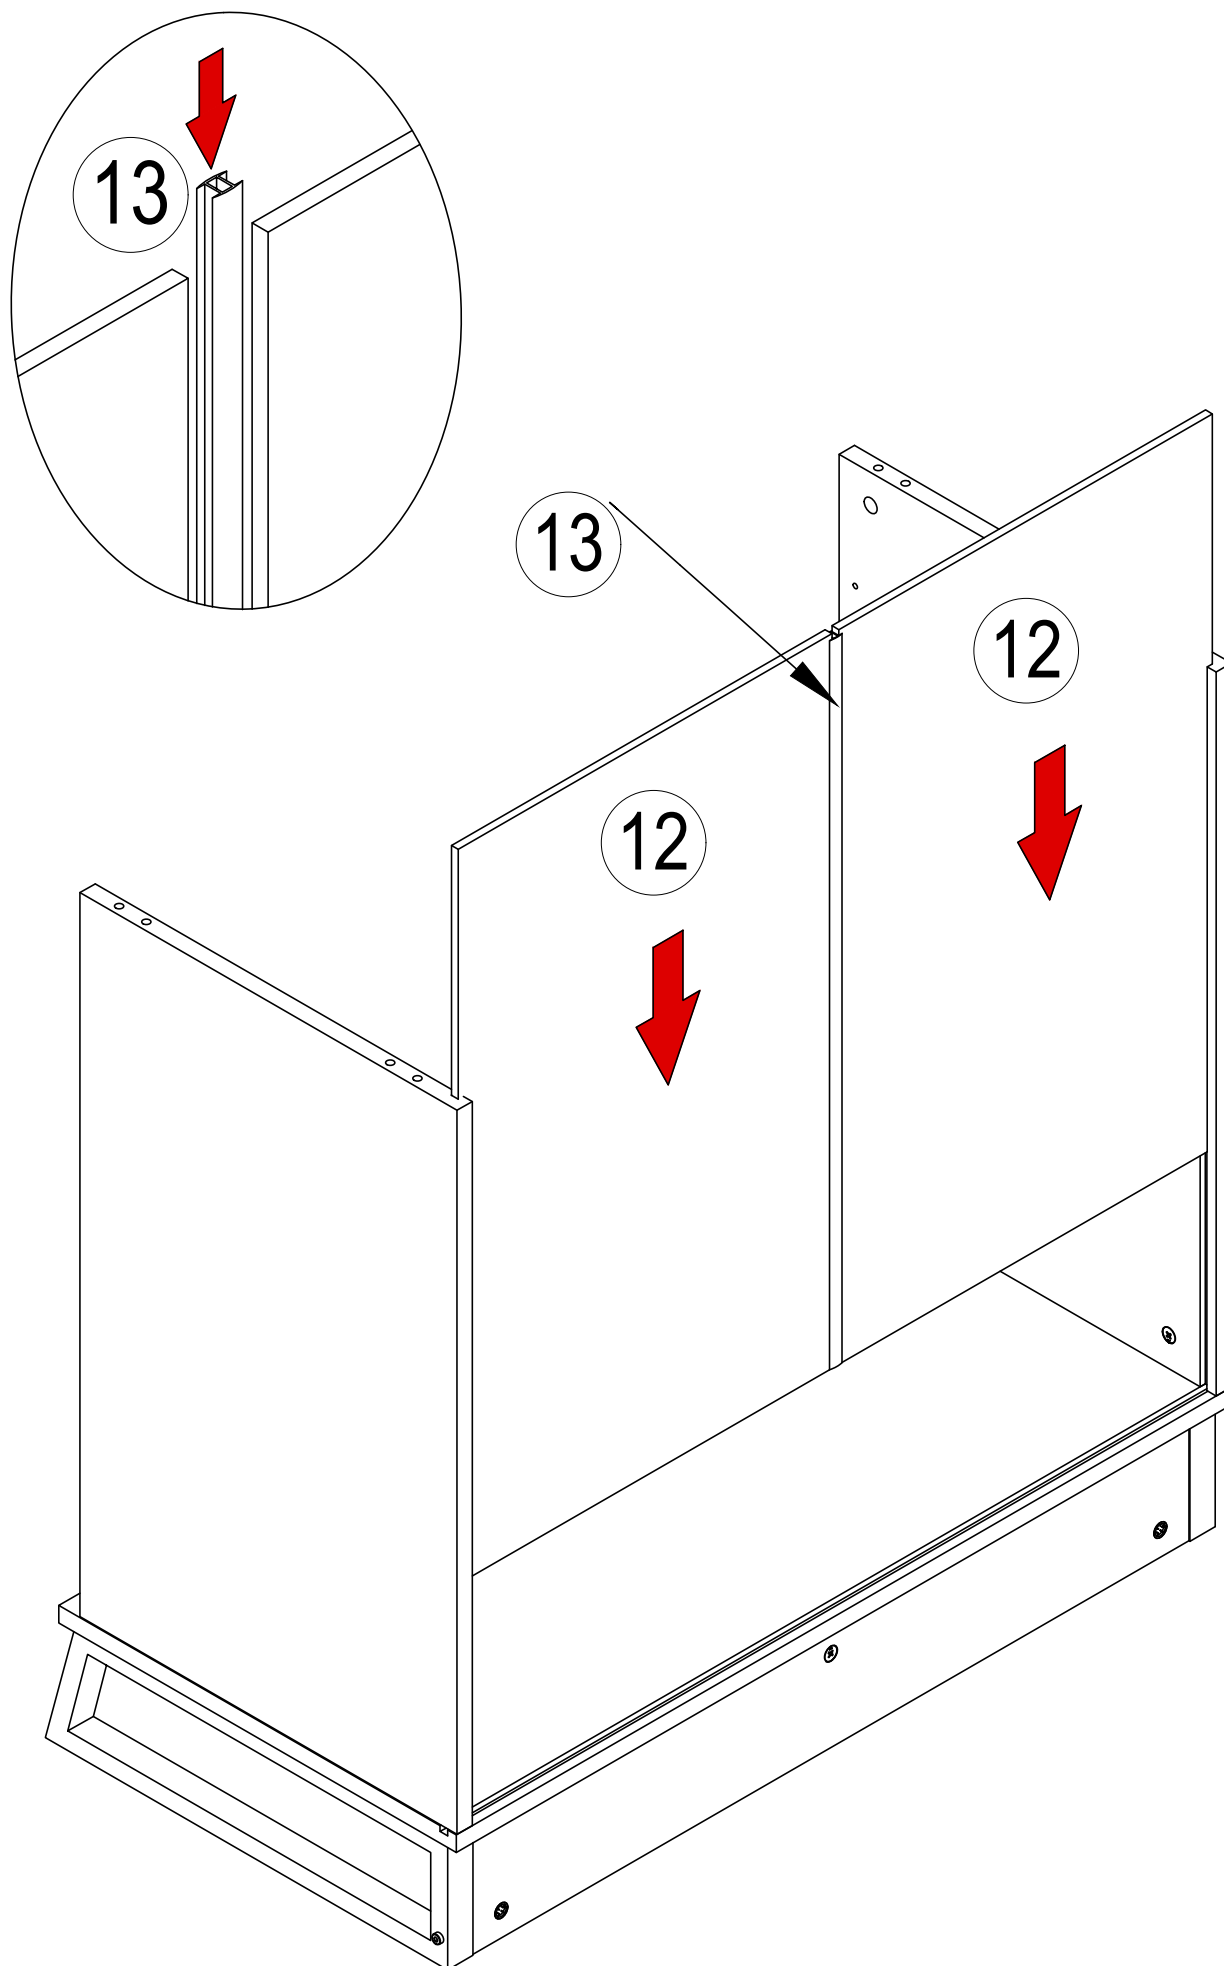 


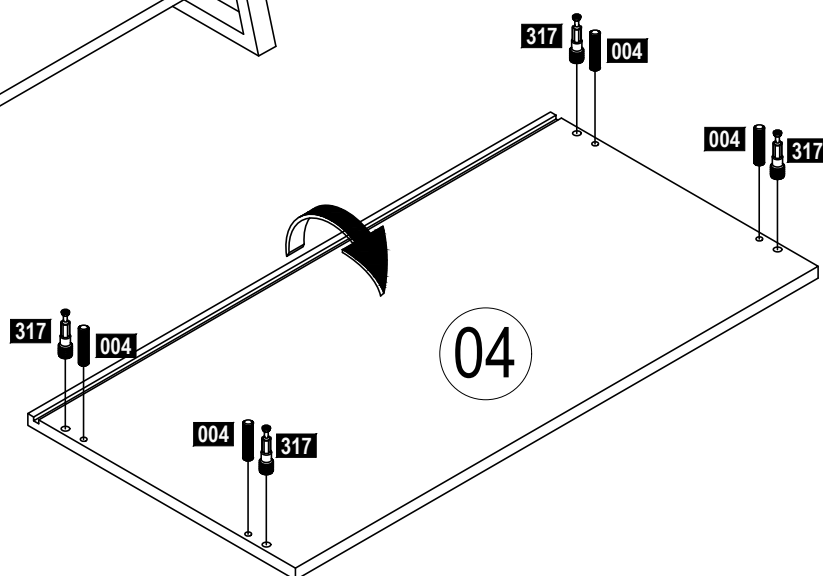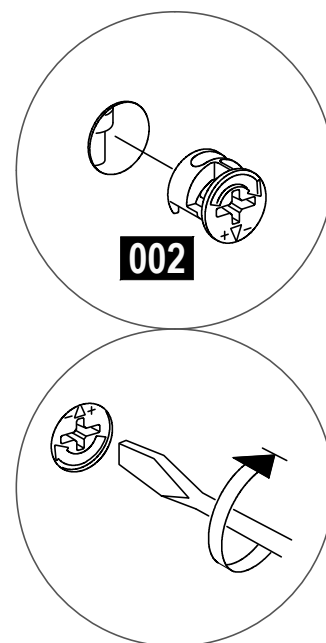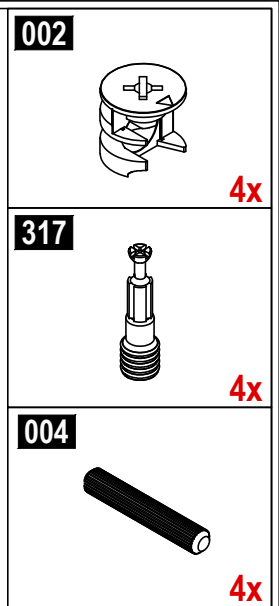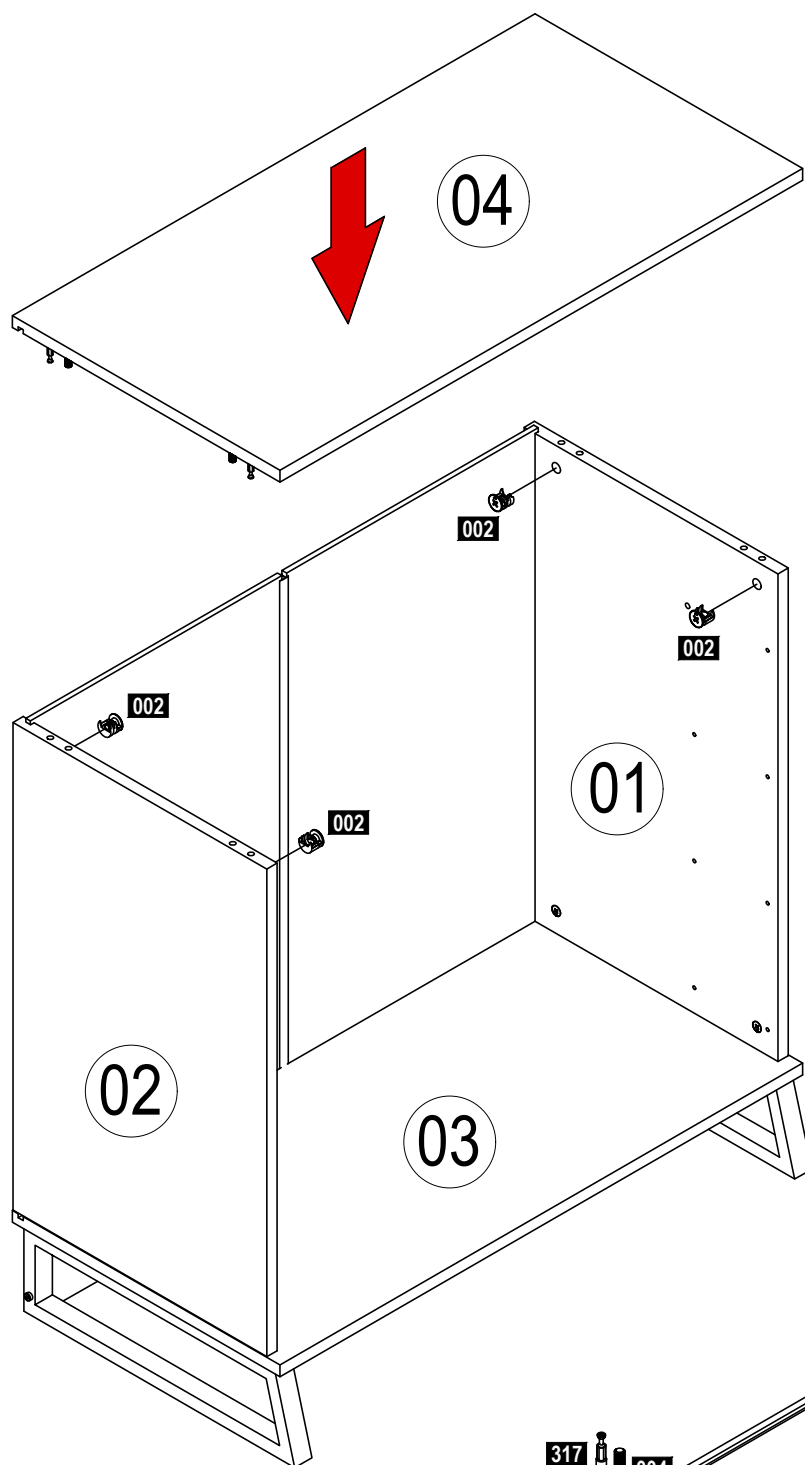    





5

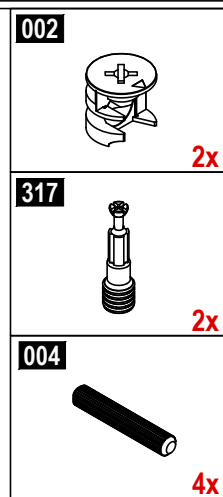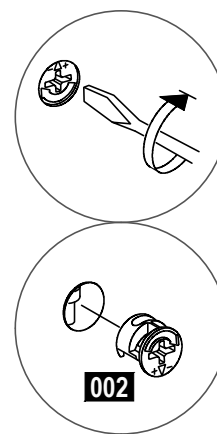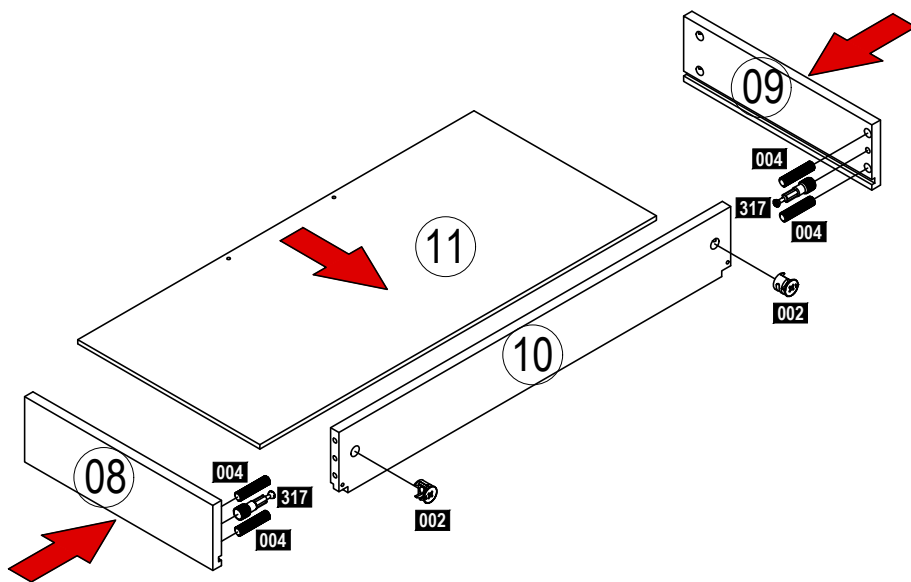   




6

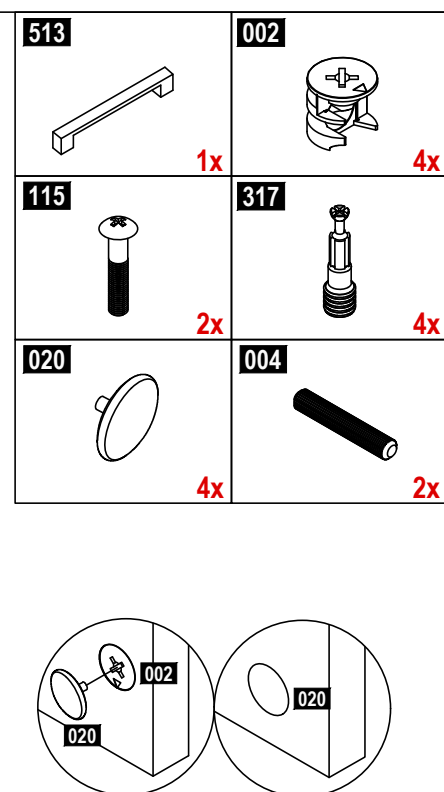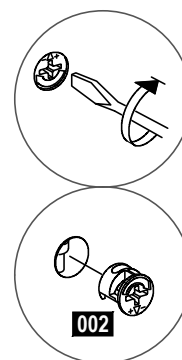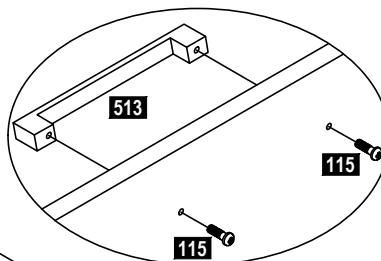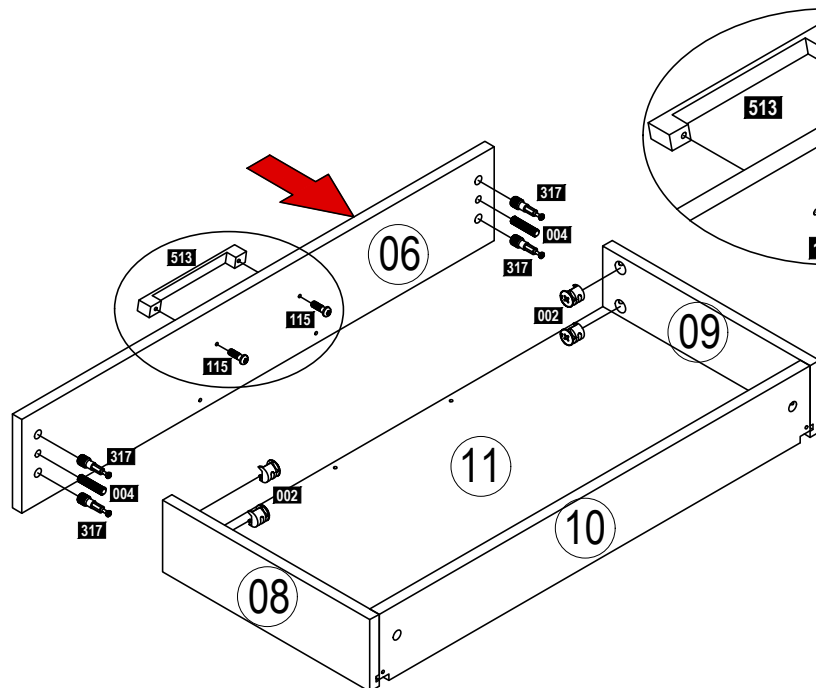    




7

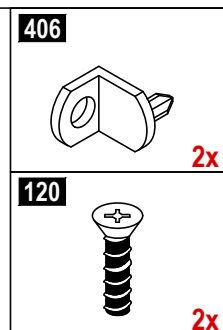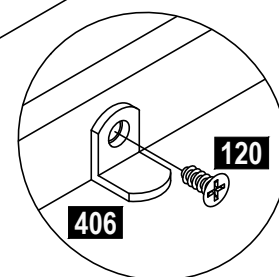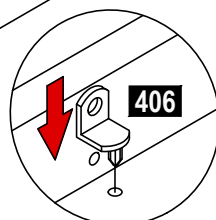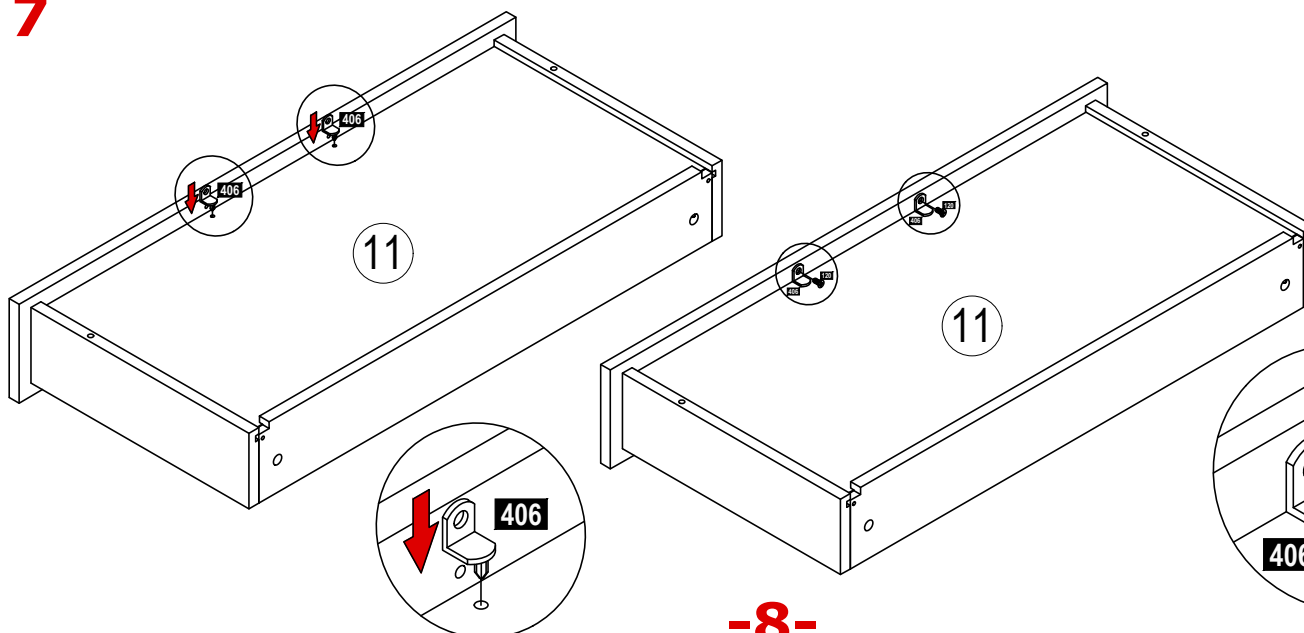    




8

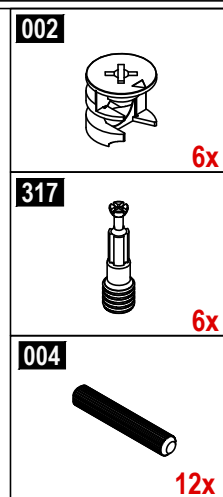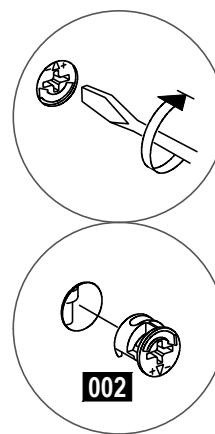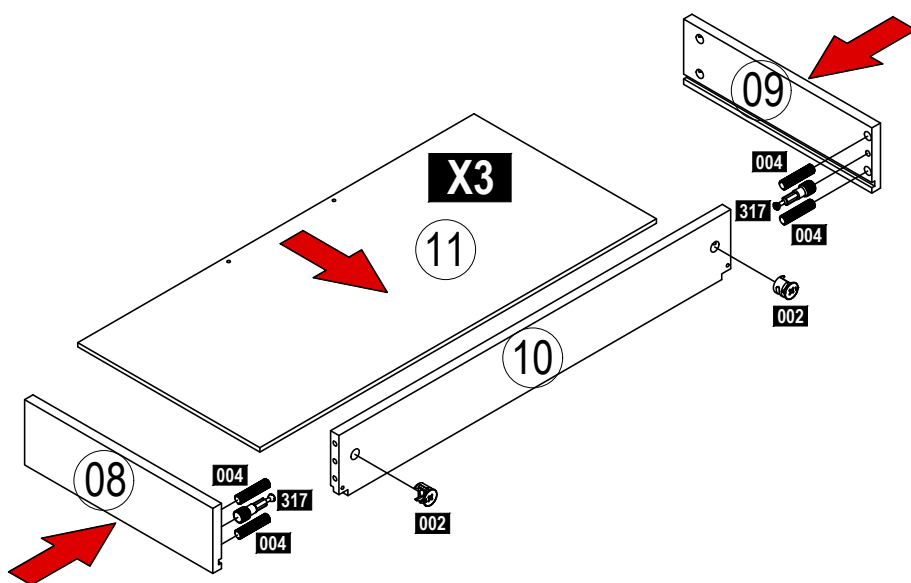   


9

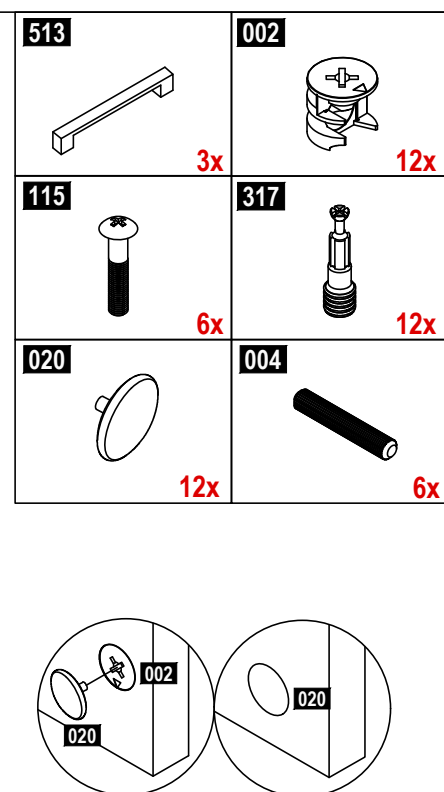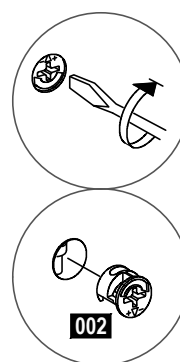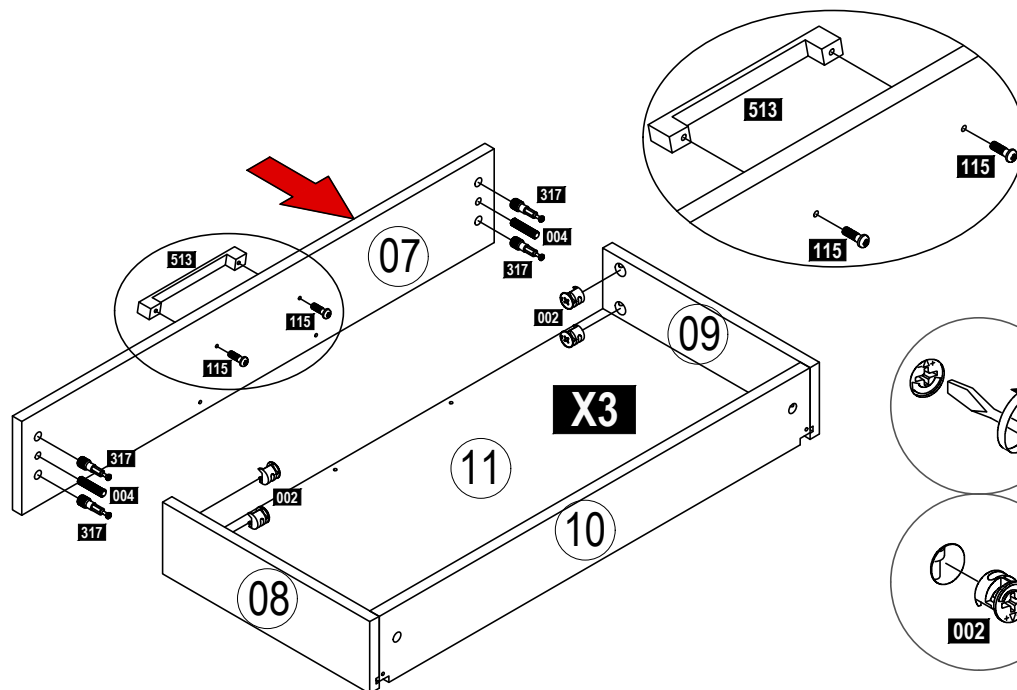   


10

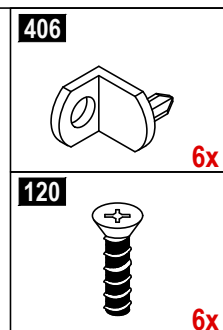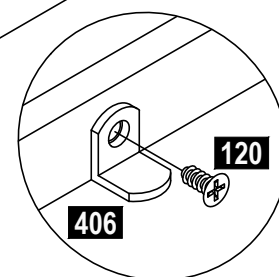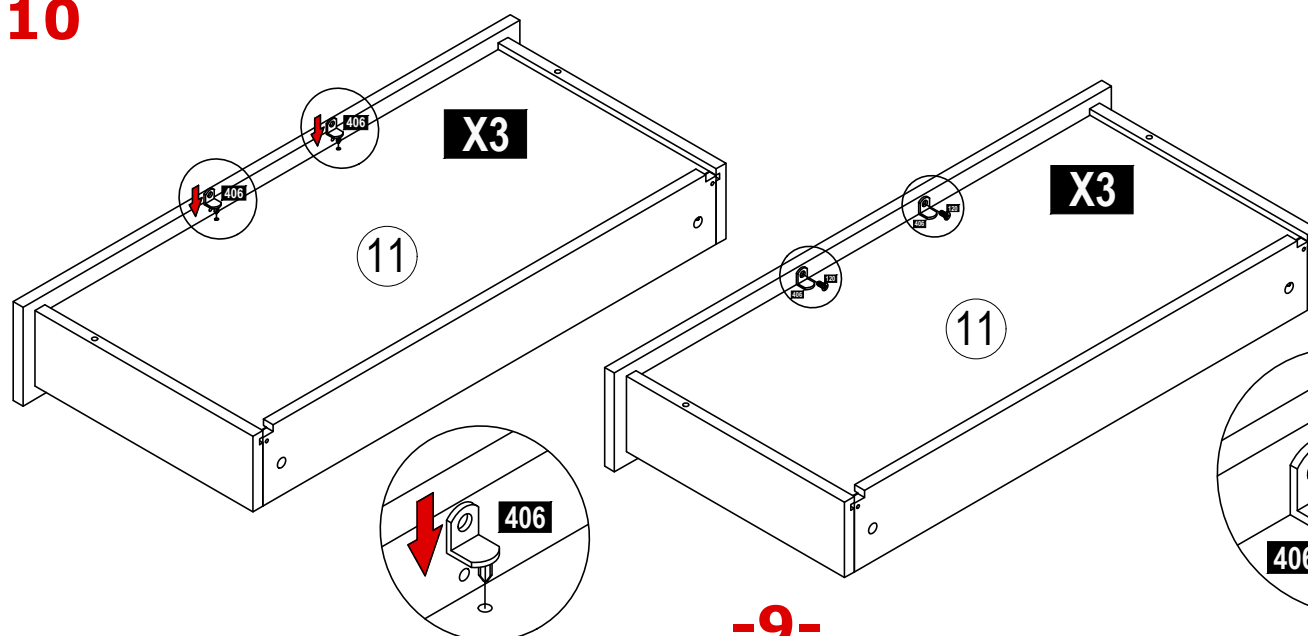   

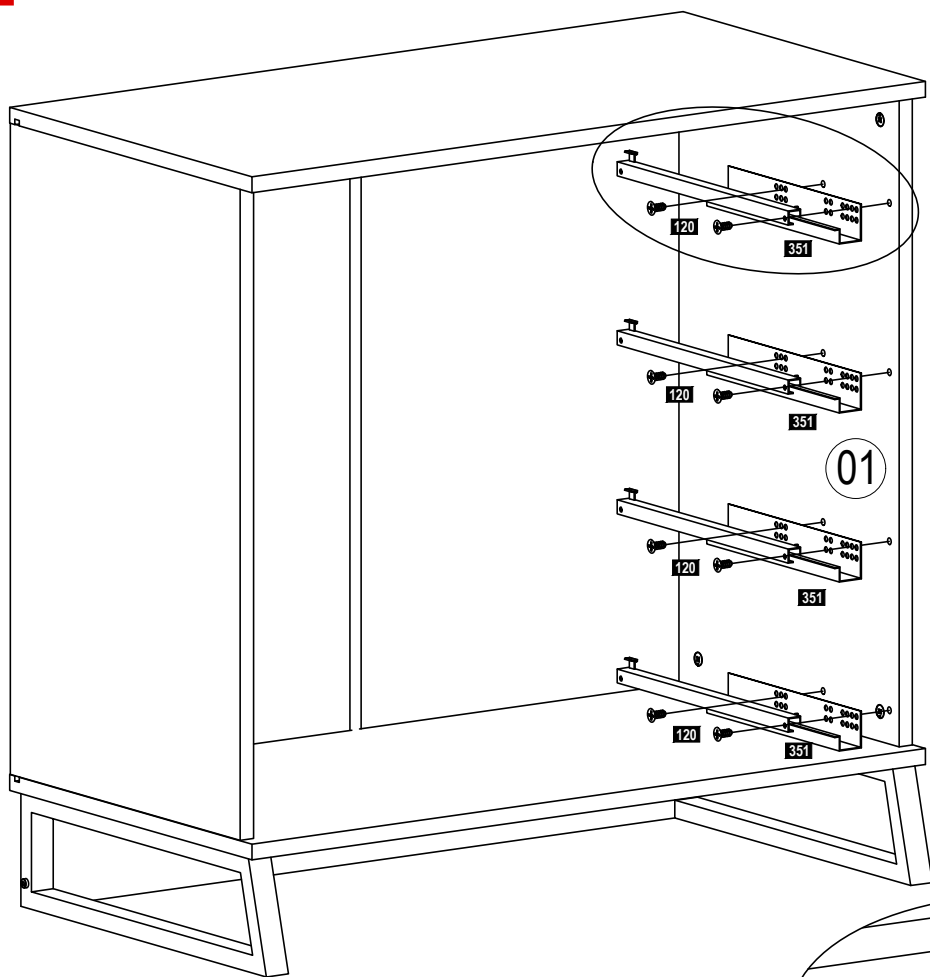 

351


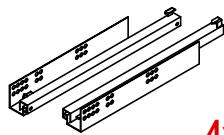 



4x

120



   16x

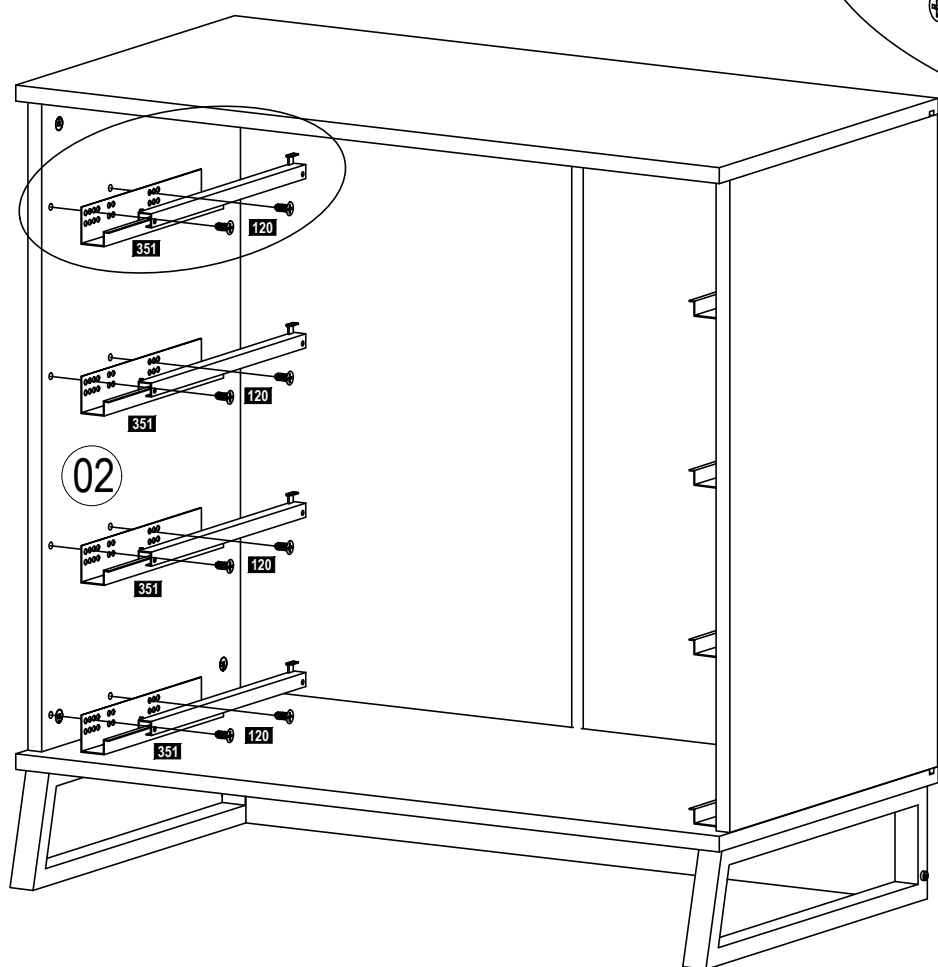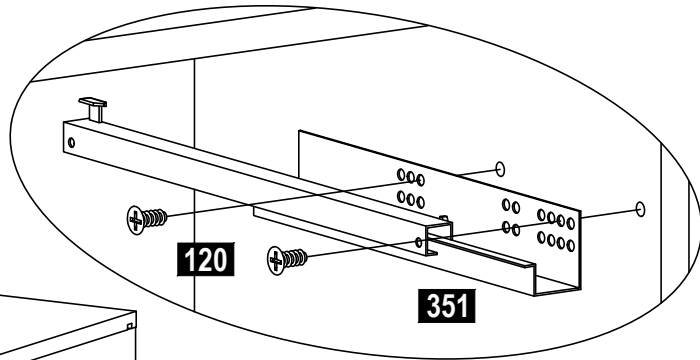

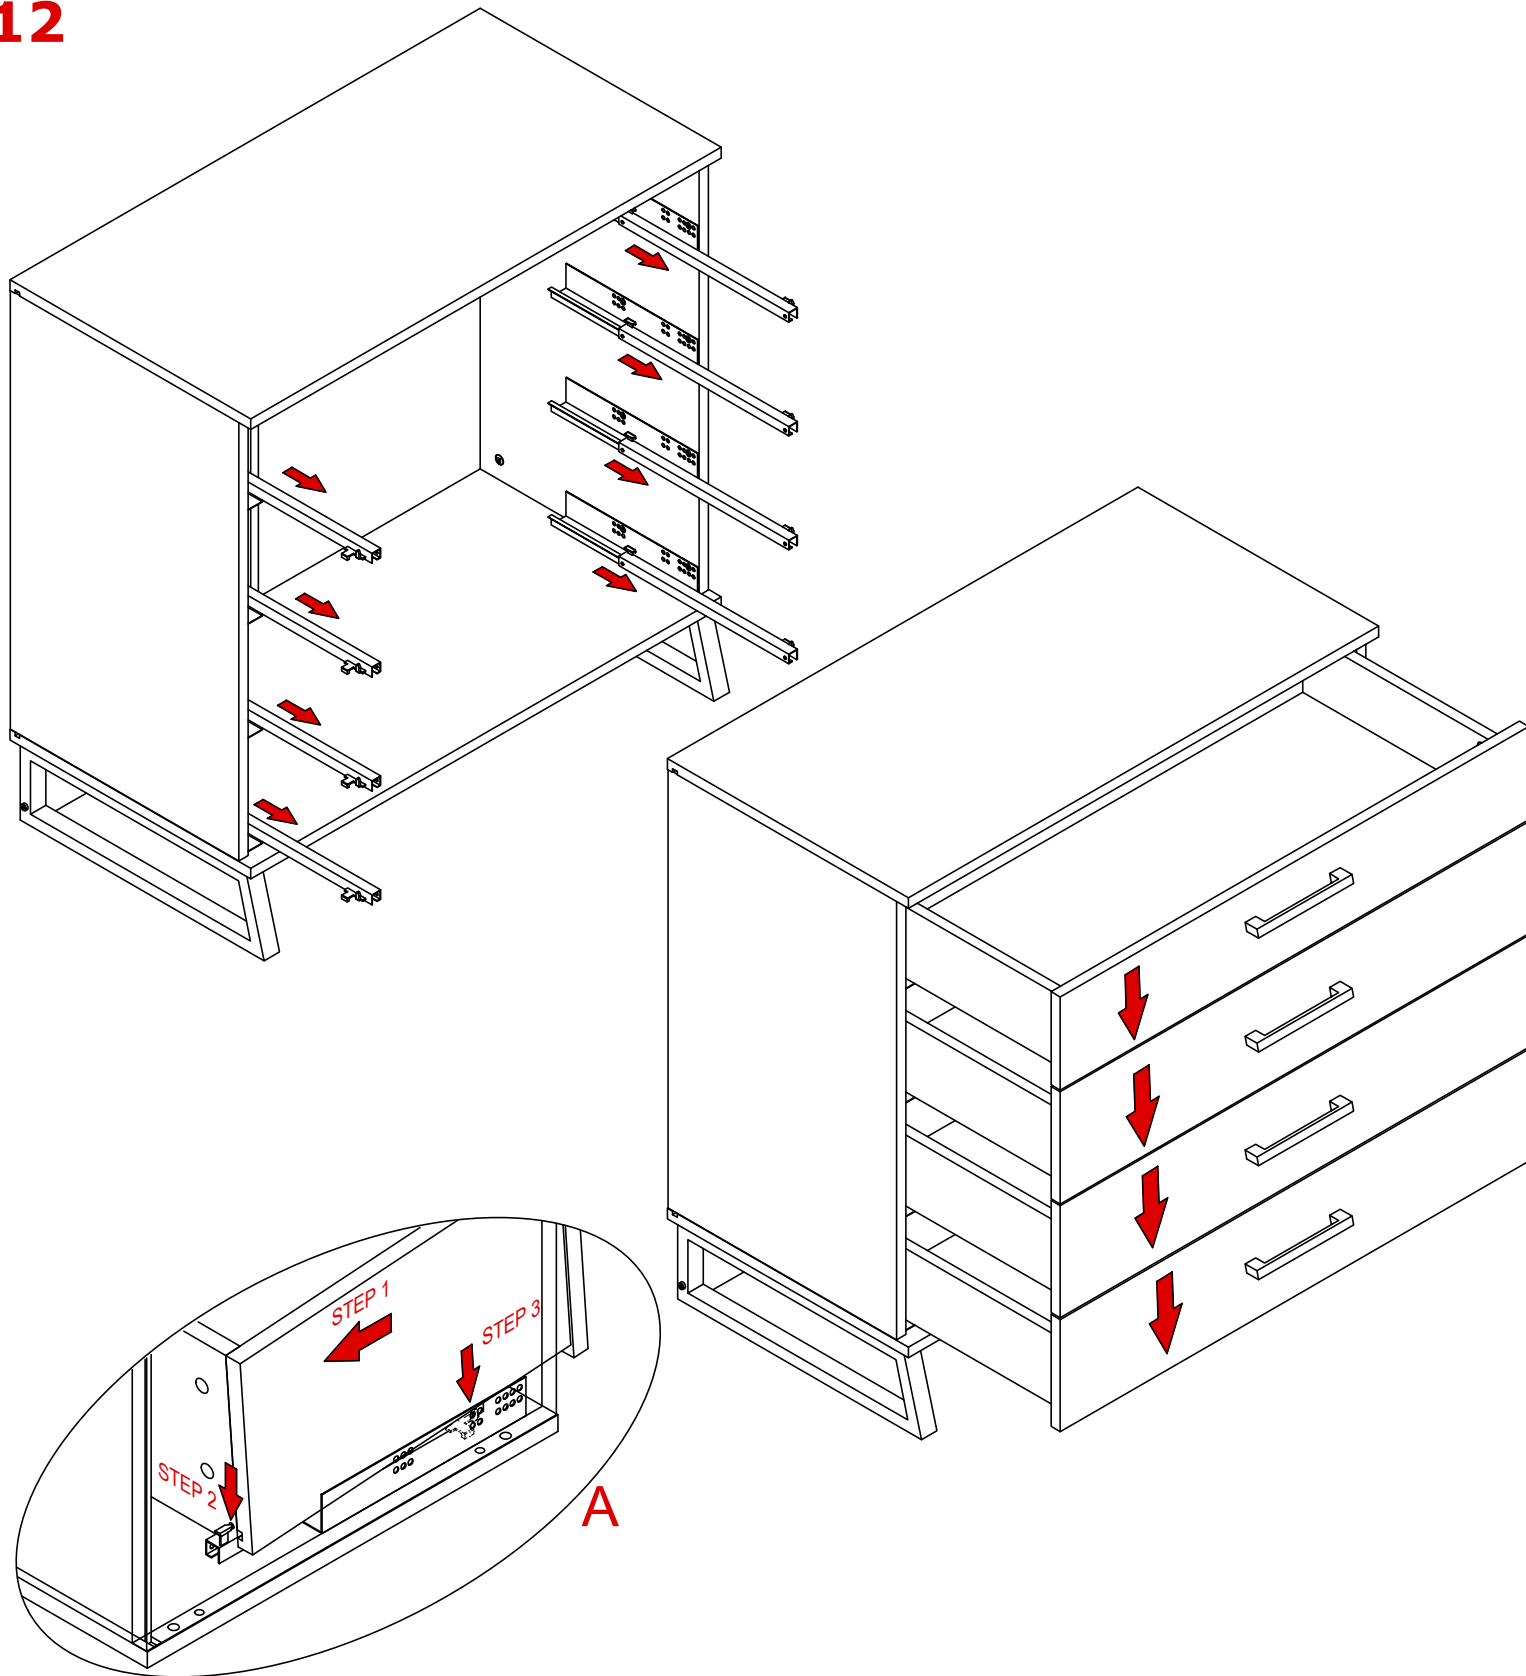

STEP 2-3

STEP 4

STEP 5

STEP 6

