 
 


Детски скрин LOOK

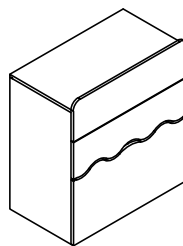



Списък с елементи

002 34 бр	317 28 бр	001 6 мм 6 бр	004 Ø8x30 34 бр	020 16 бр
406 4 бр	120 6.3*13 мм 12 бр	351 2 компл	822 4 бр	092 4*18 мм 8 бр
011 3.5x25 10 бр				

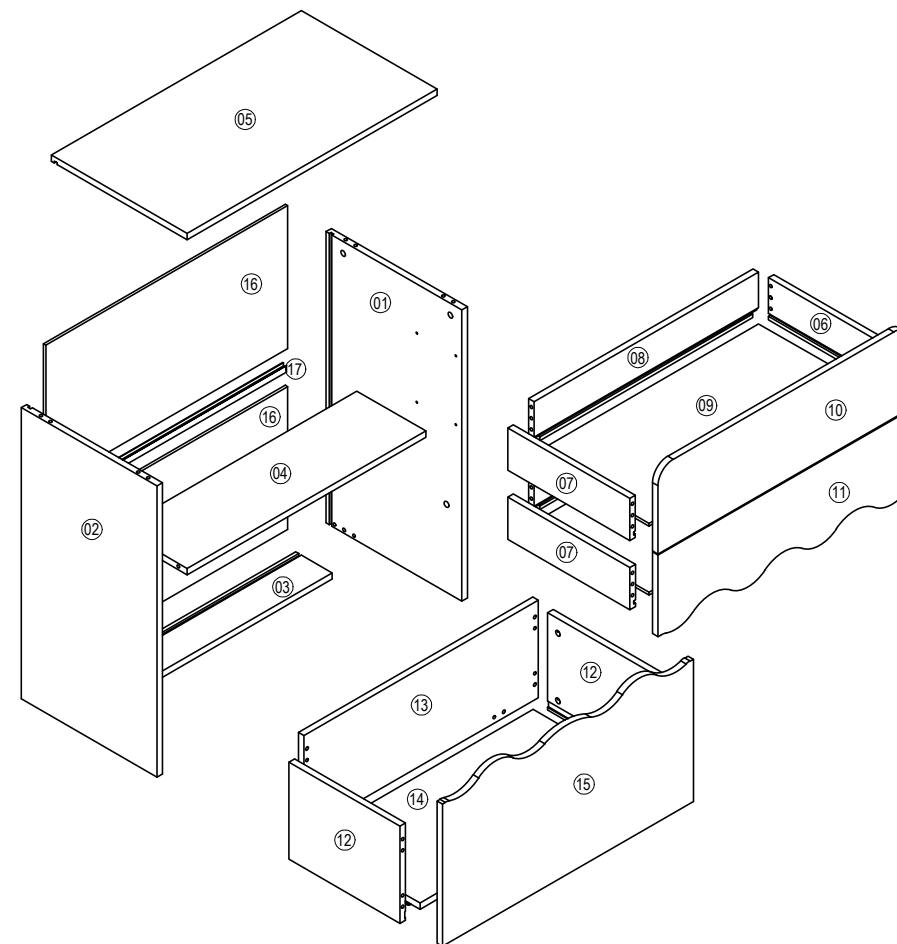



NO	БРОЙ	РАЗМЕР	NO	БРОЙ	РАЗМЕР	NO	БРОЙ	РАЗМЕР
01	1	827 X 445	11	1	823 X 242			
02	1	827 X 445	12	2	364 X 276			
03	1	782 X 120	13	1	823 X 438			
04	1	782 X 226	14	1	768 X 277			
05	1	820 X 445	14	1	735 X 364			
06	2	400 X 120	16	2	793 X 406			
07	2	400 X 120	17	1	782 X 26			
08	2	736 X 120						
09	2	746 X 387						
10	1	823 X 242						



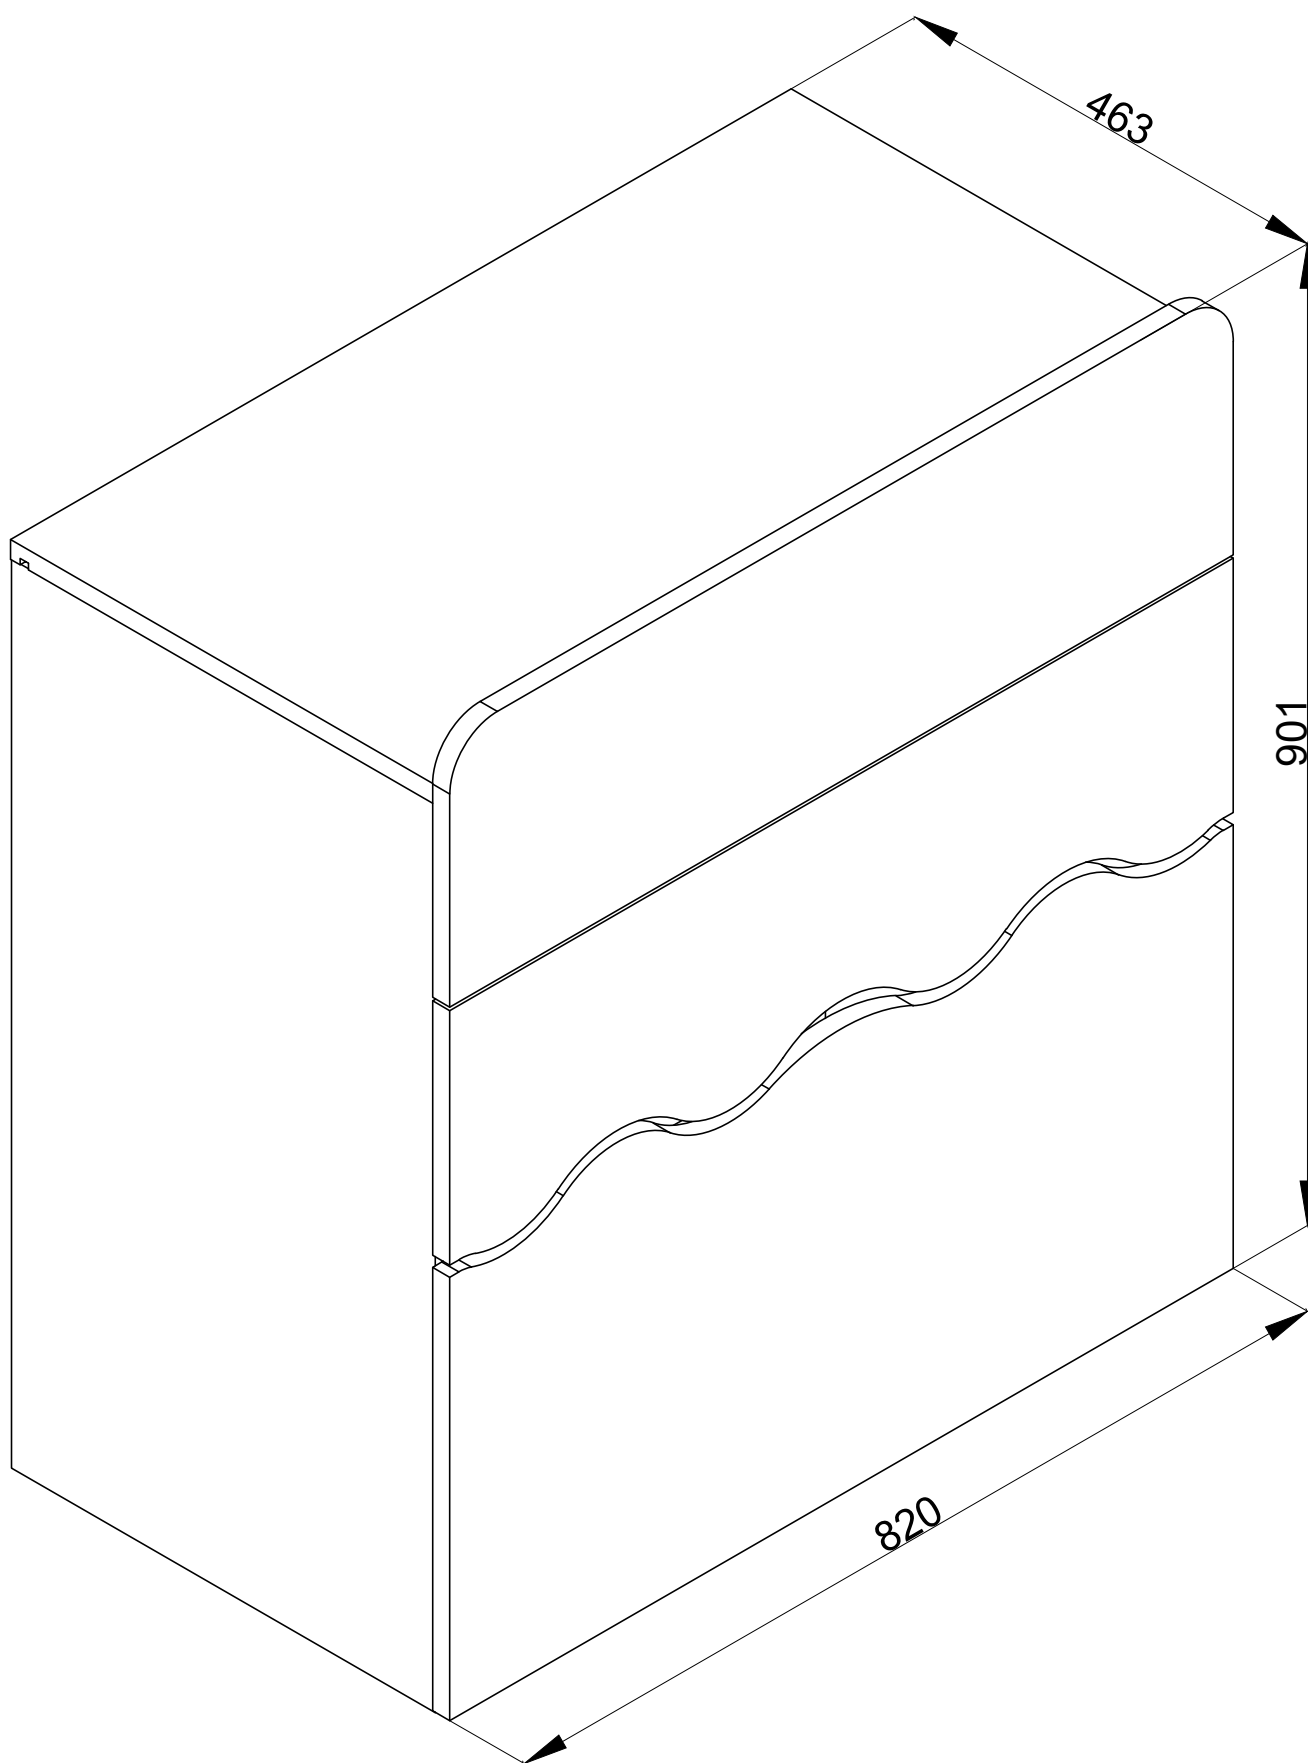 








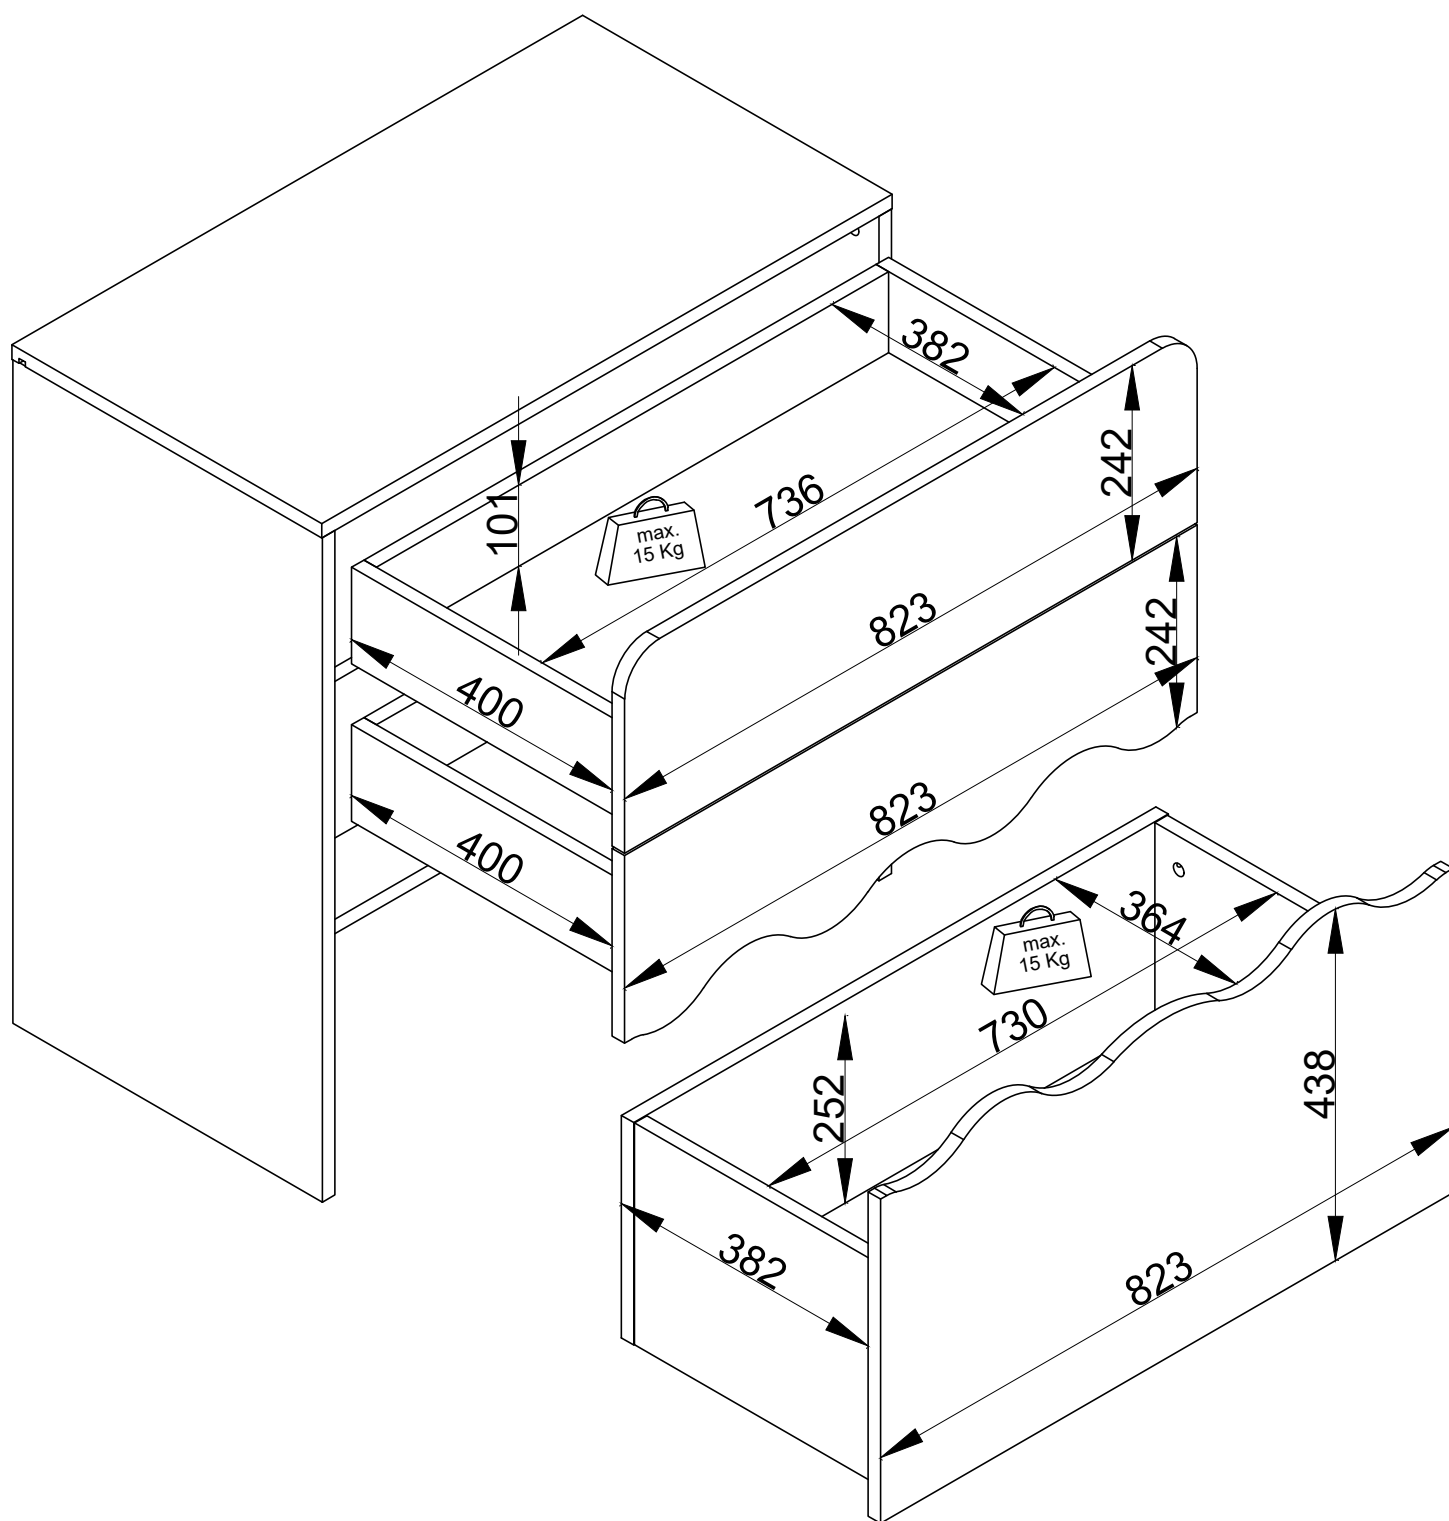 


1

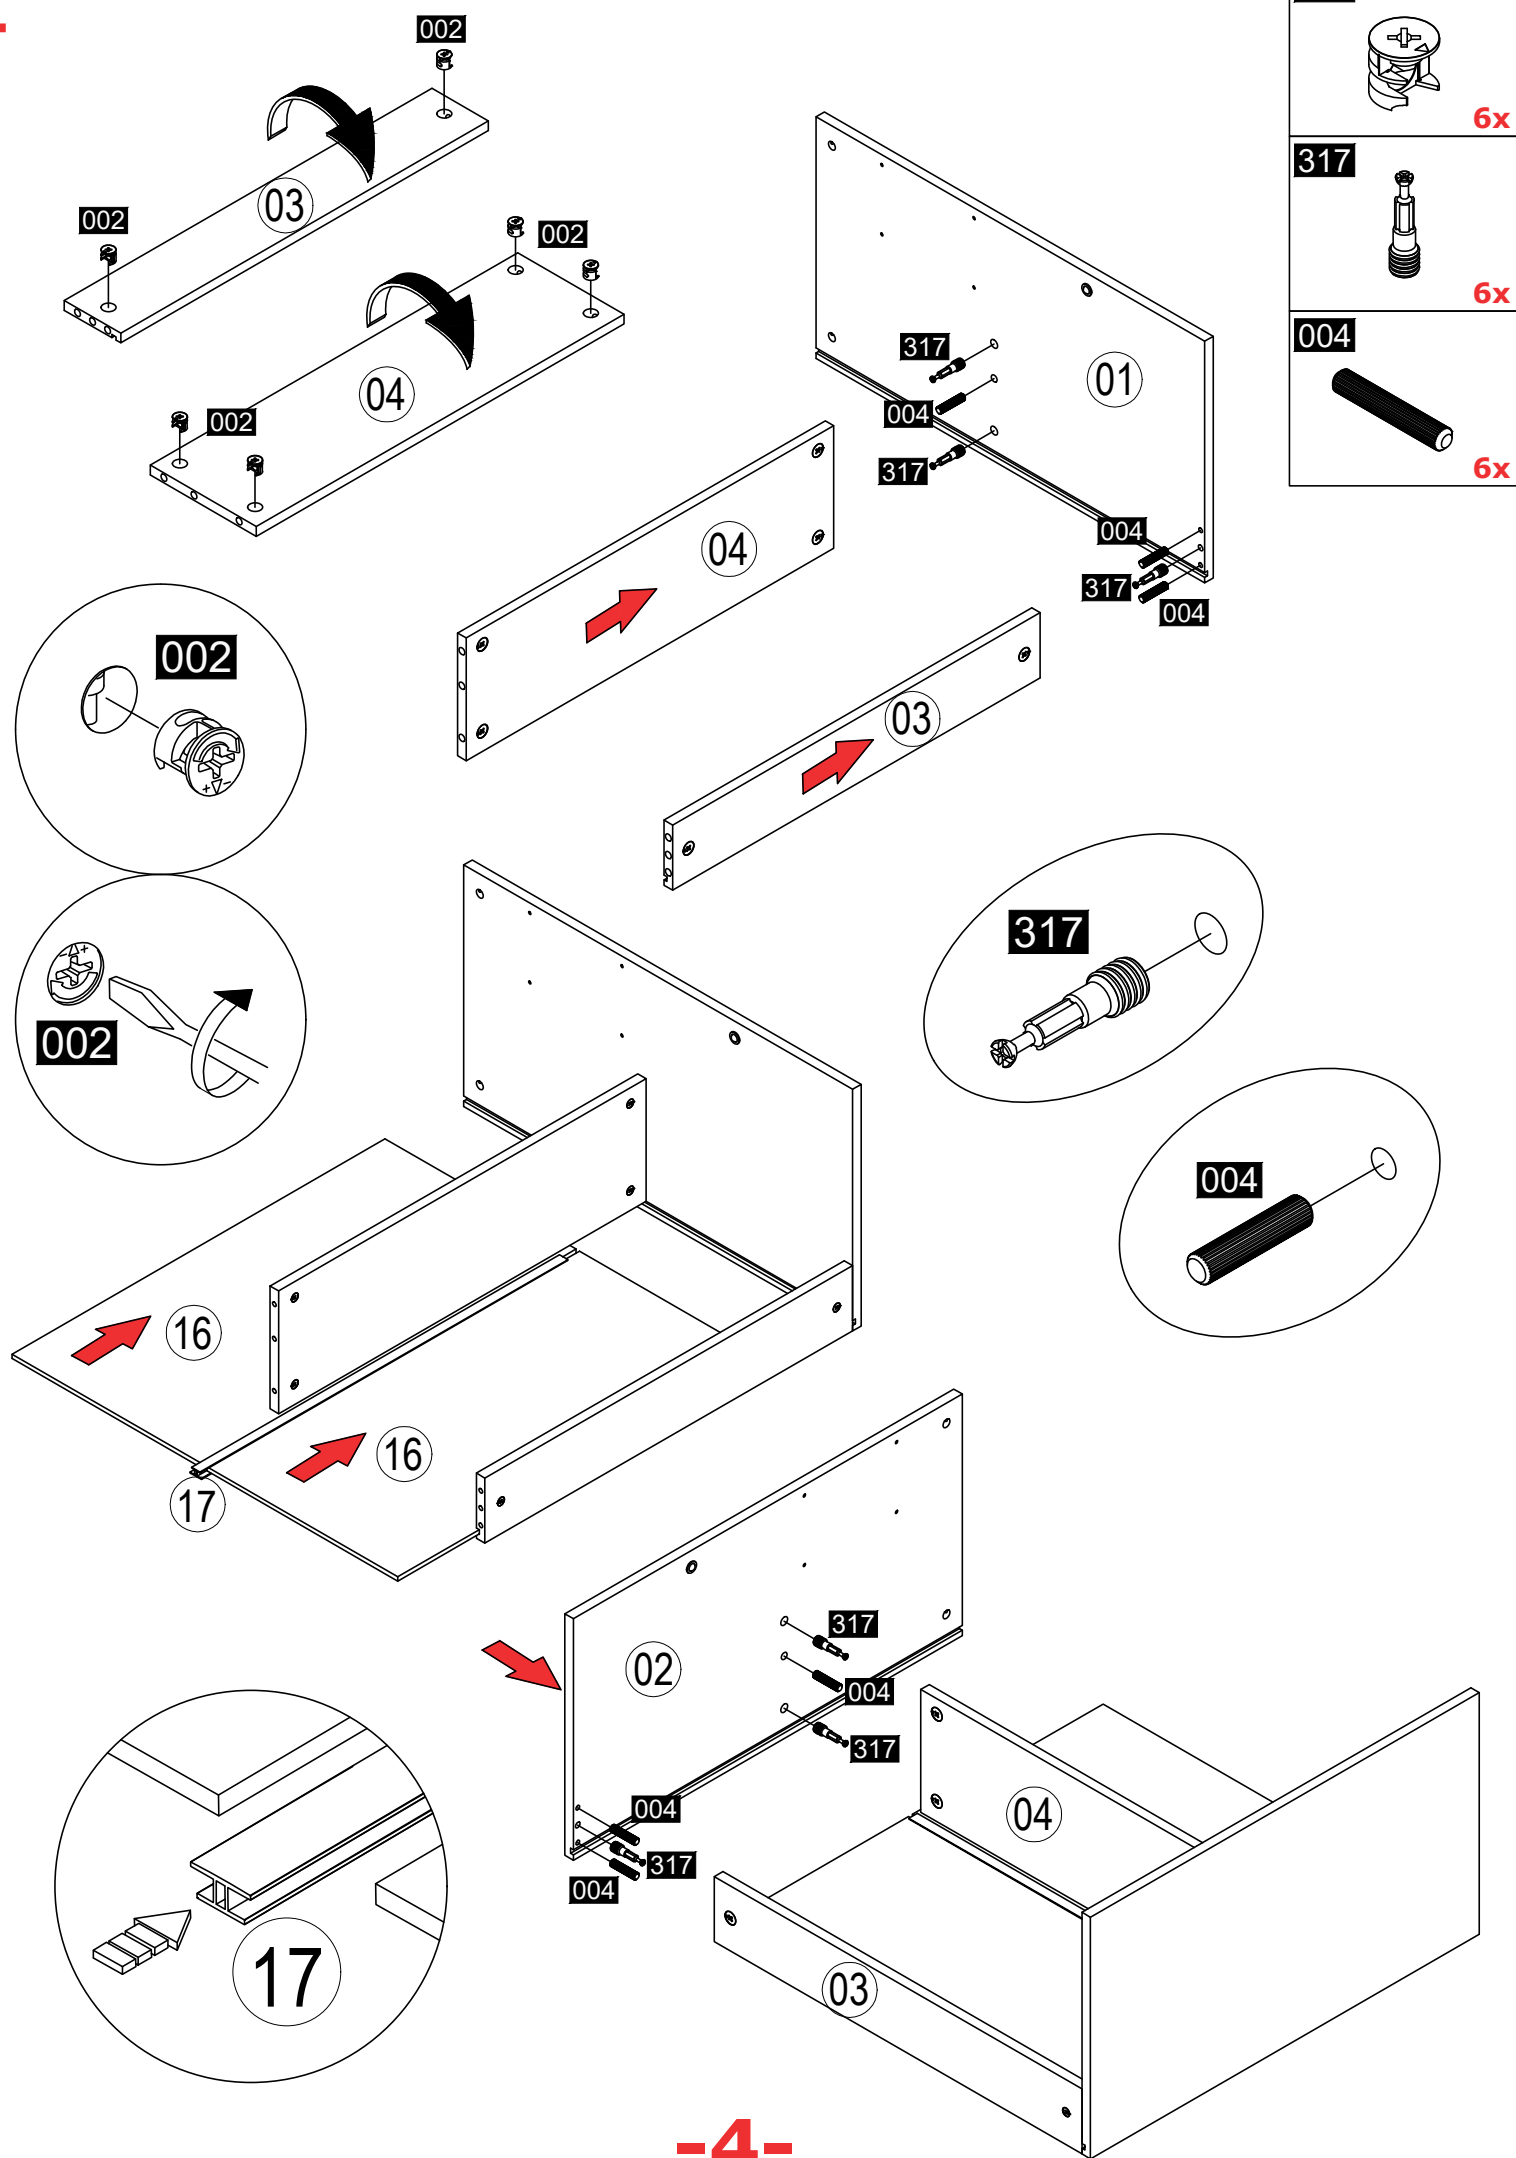 


 351		2x
120		8x

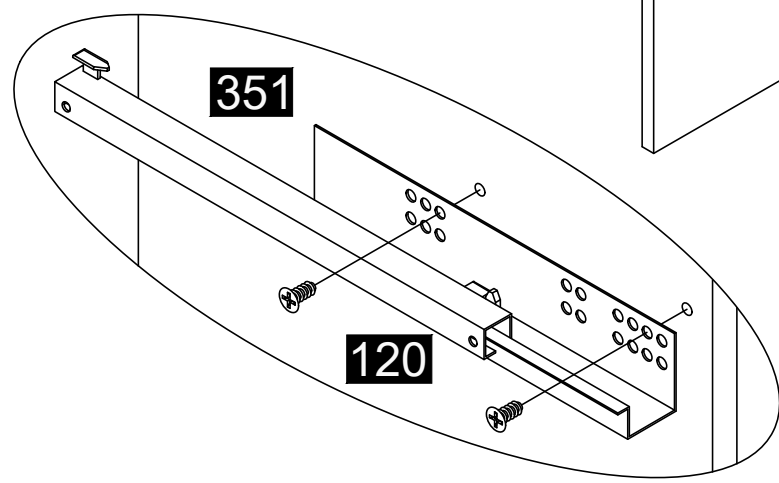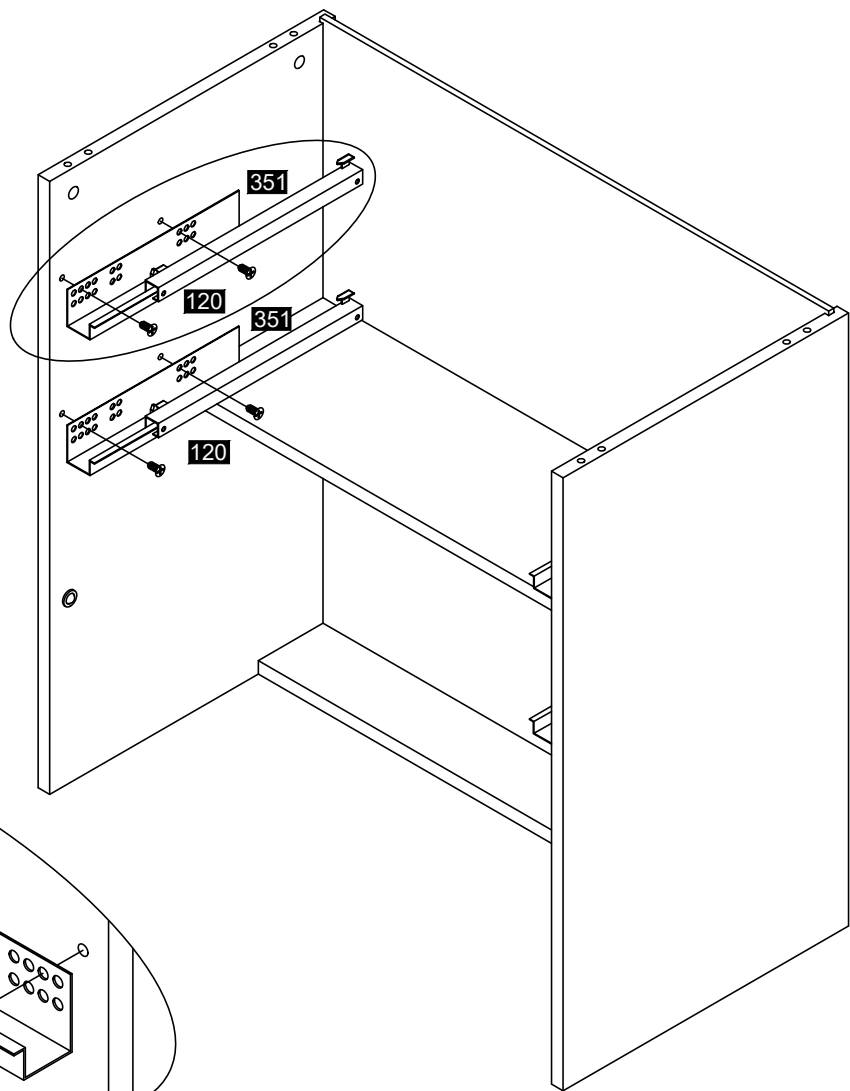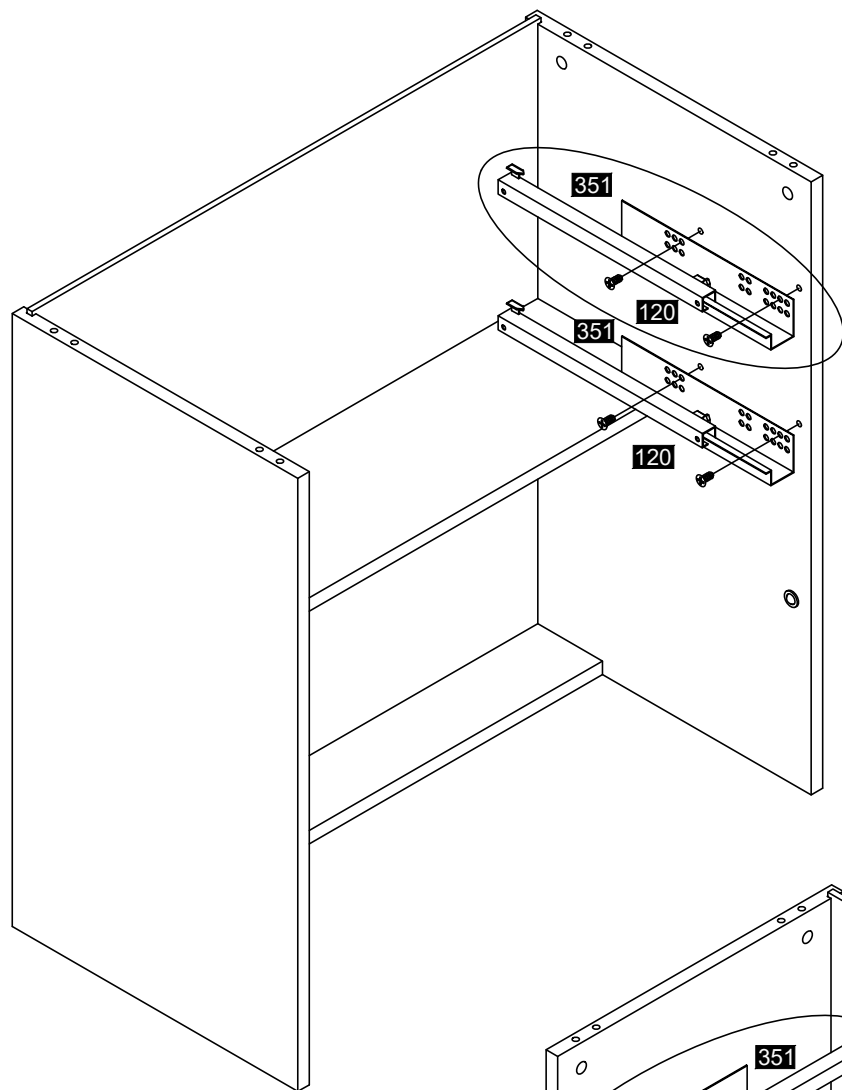   

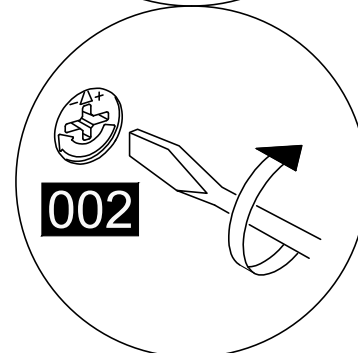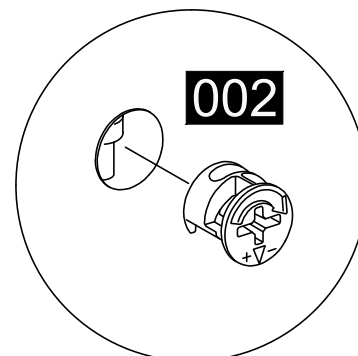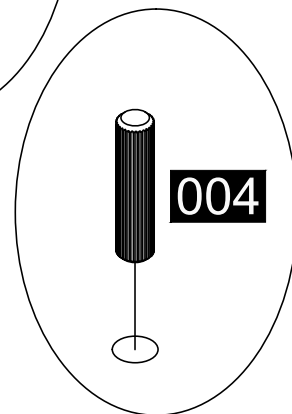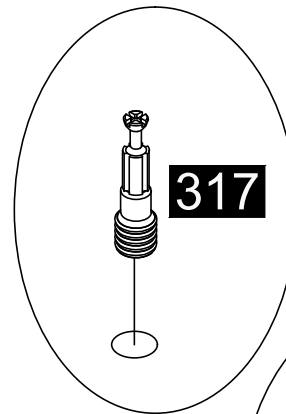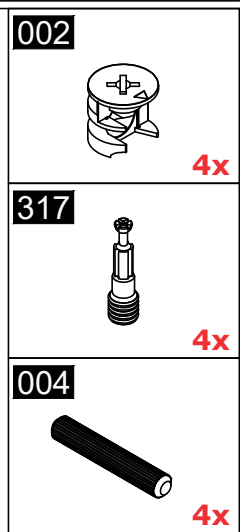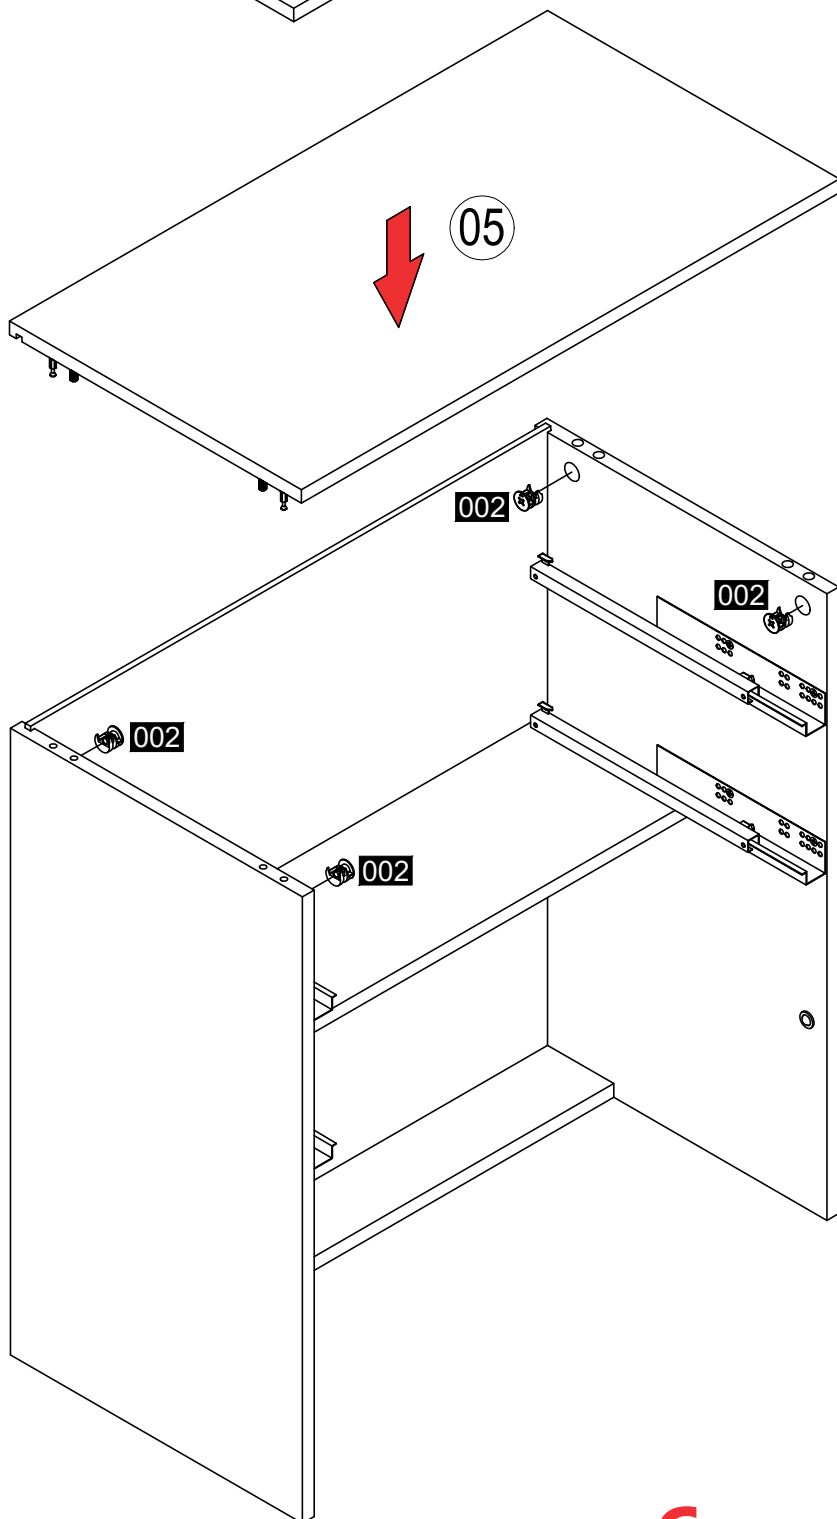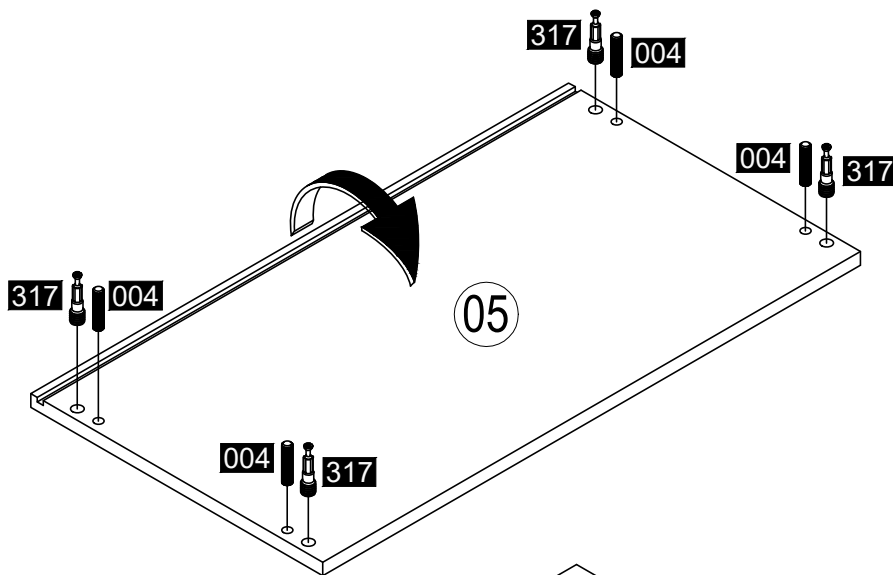       

4

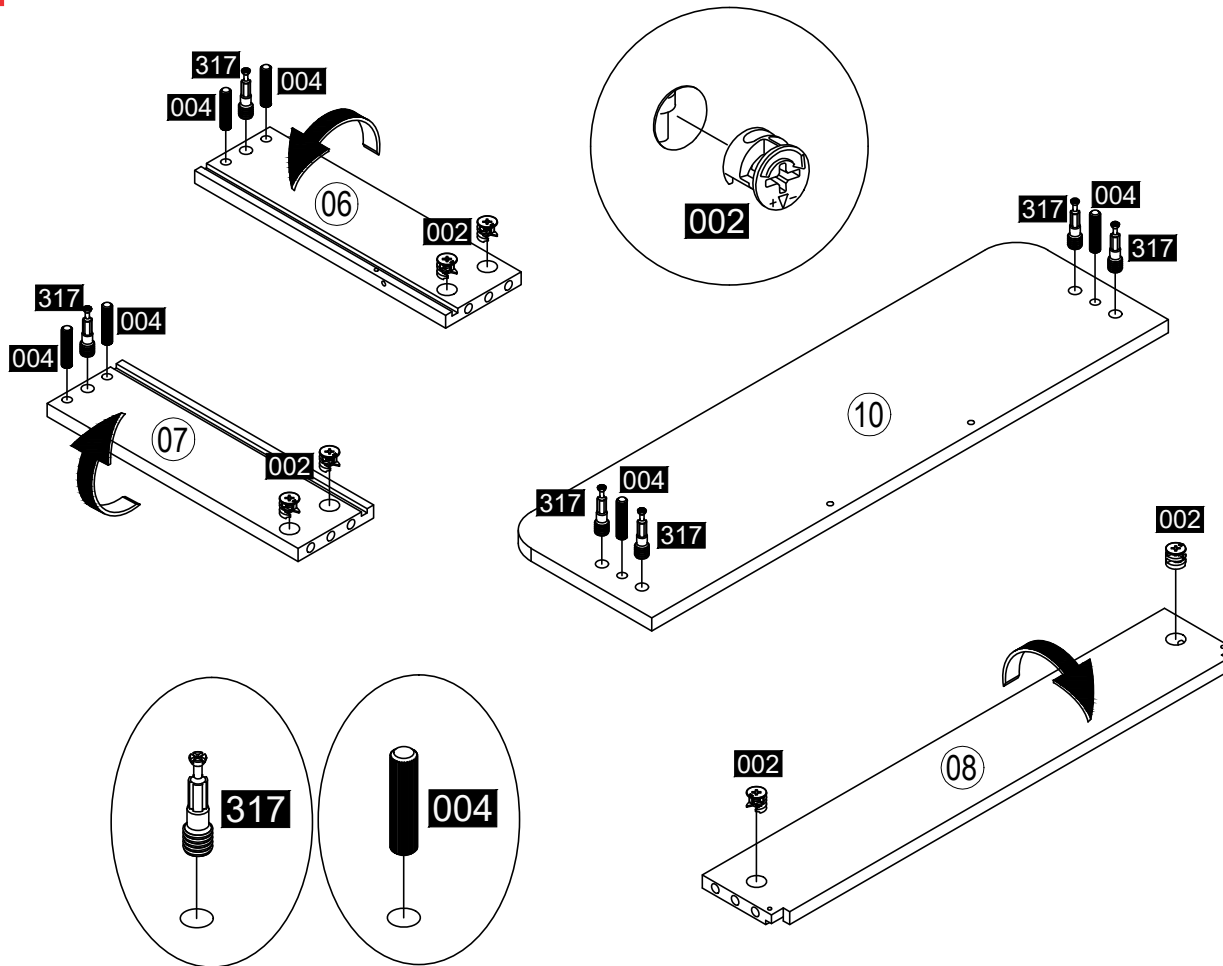 

002



6x

317



 
6x

004



6x

5

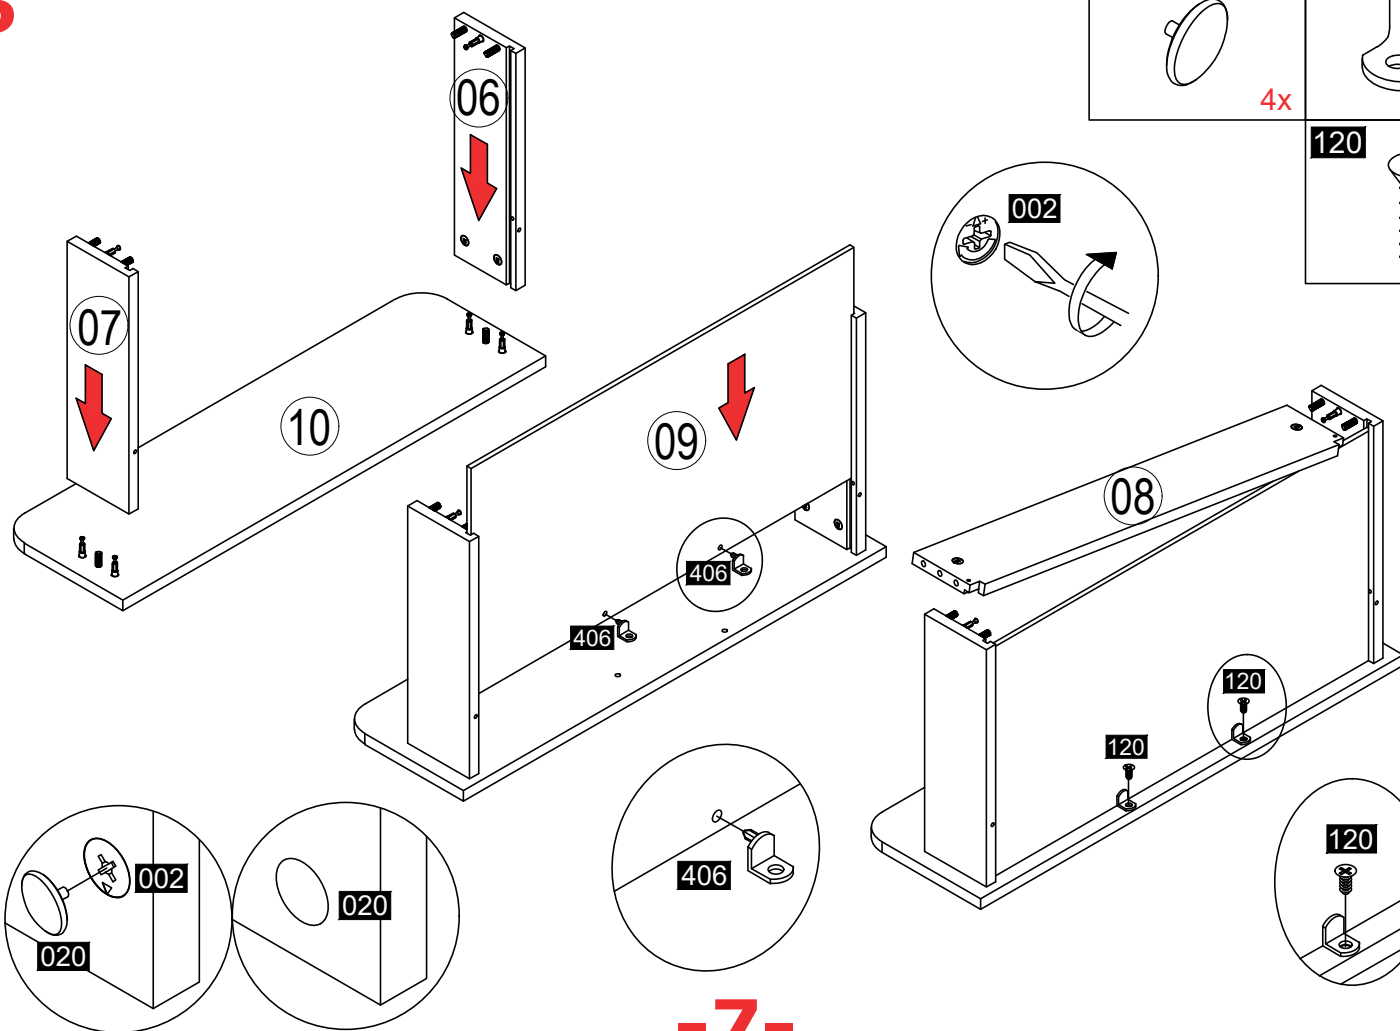

020



4x

406



2x

 
120



2x


-7-

6

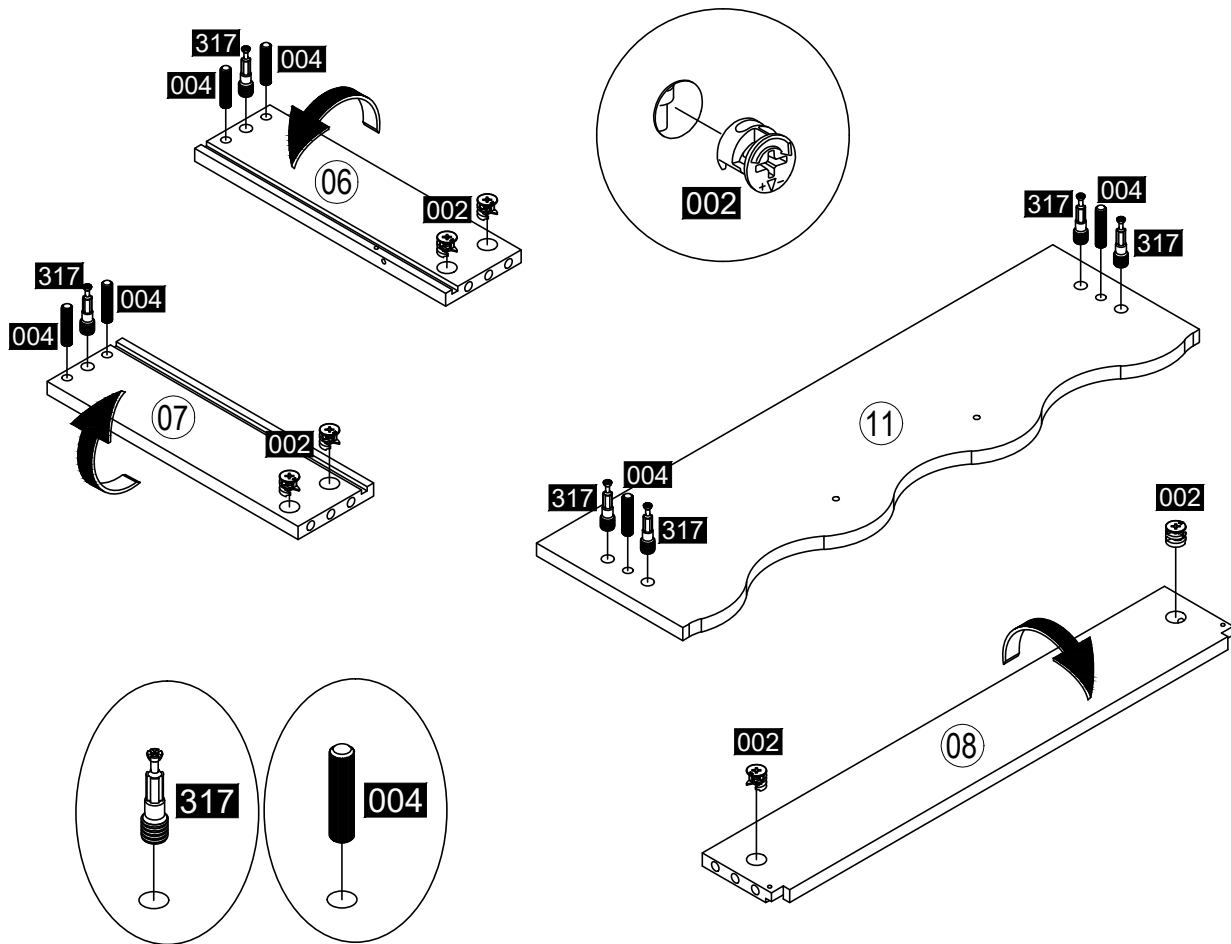


- | | | |
|-----|--|----|
| 002 | | 6x |
| 317 | | 6x |
| 004 | | 6x |

 7

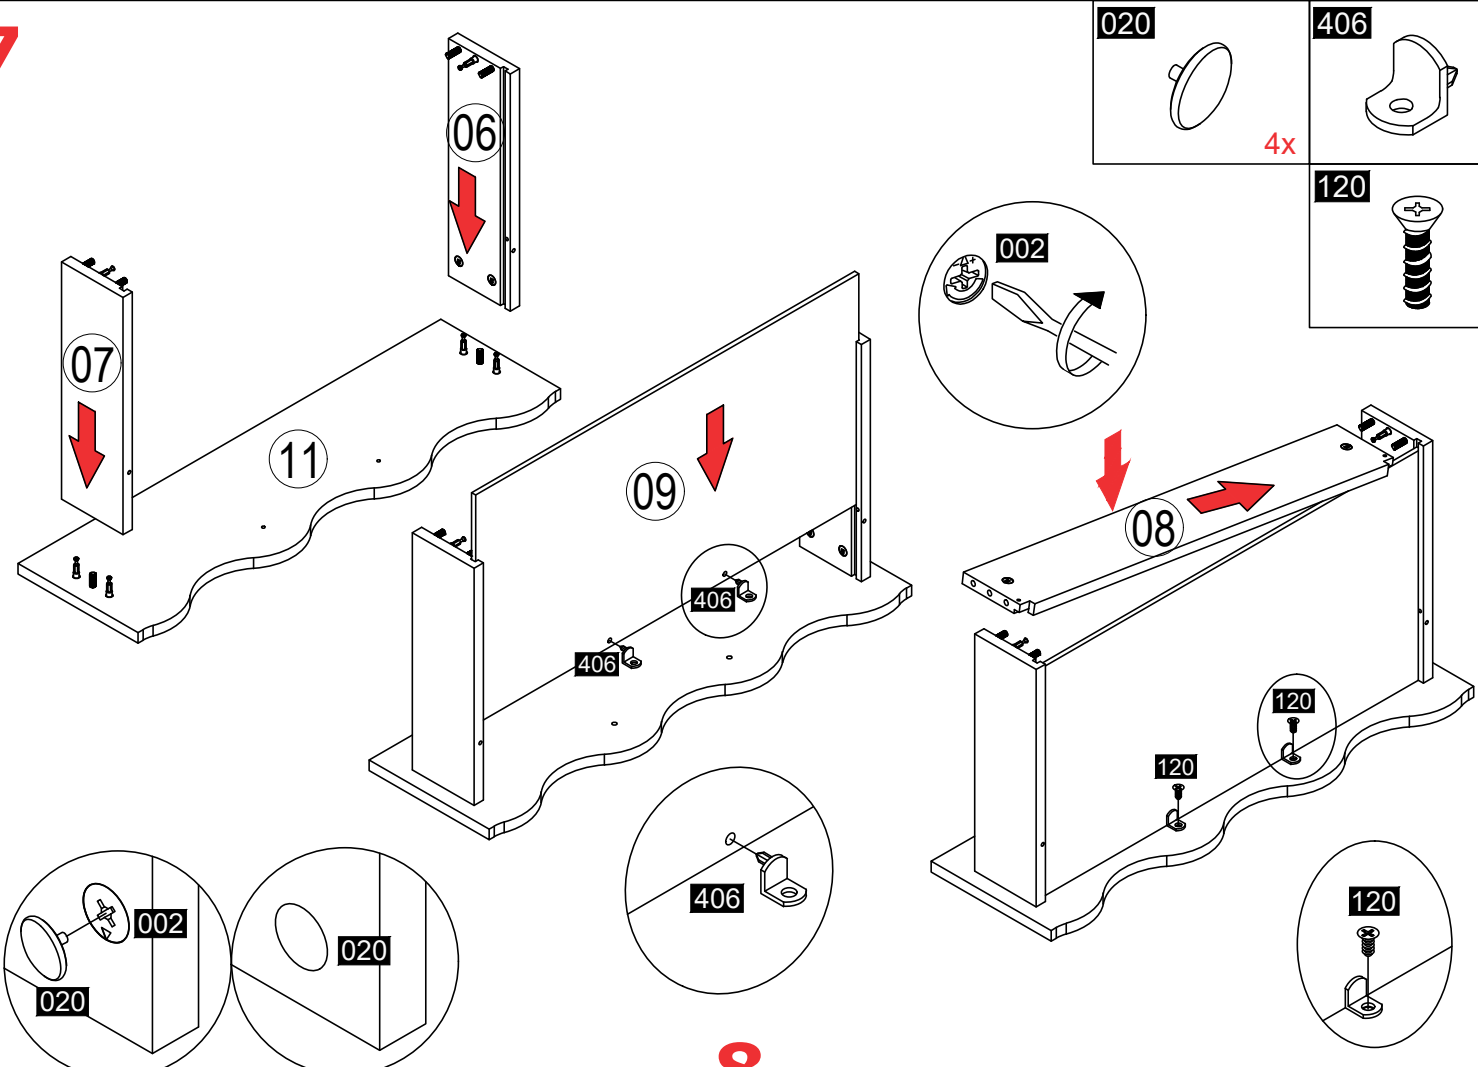





- | | | |
|-----|--|----|
| 020 | | 4x |
| 406 | | 2x |
| 120 | | 2x |

 8

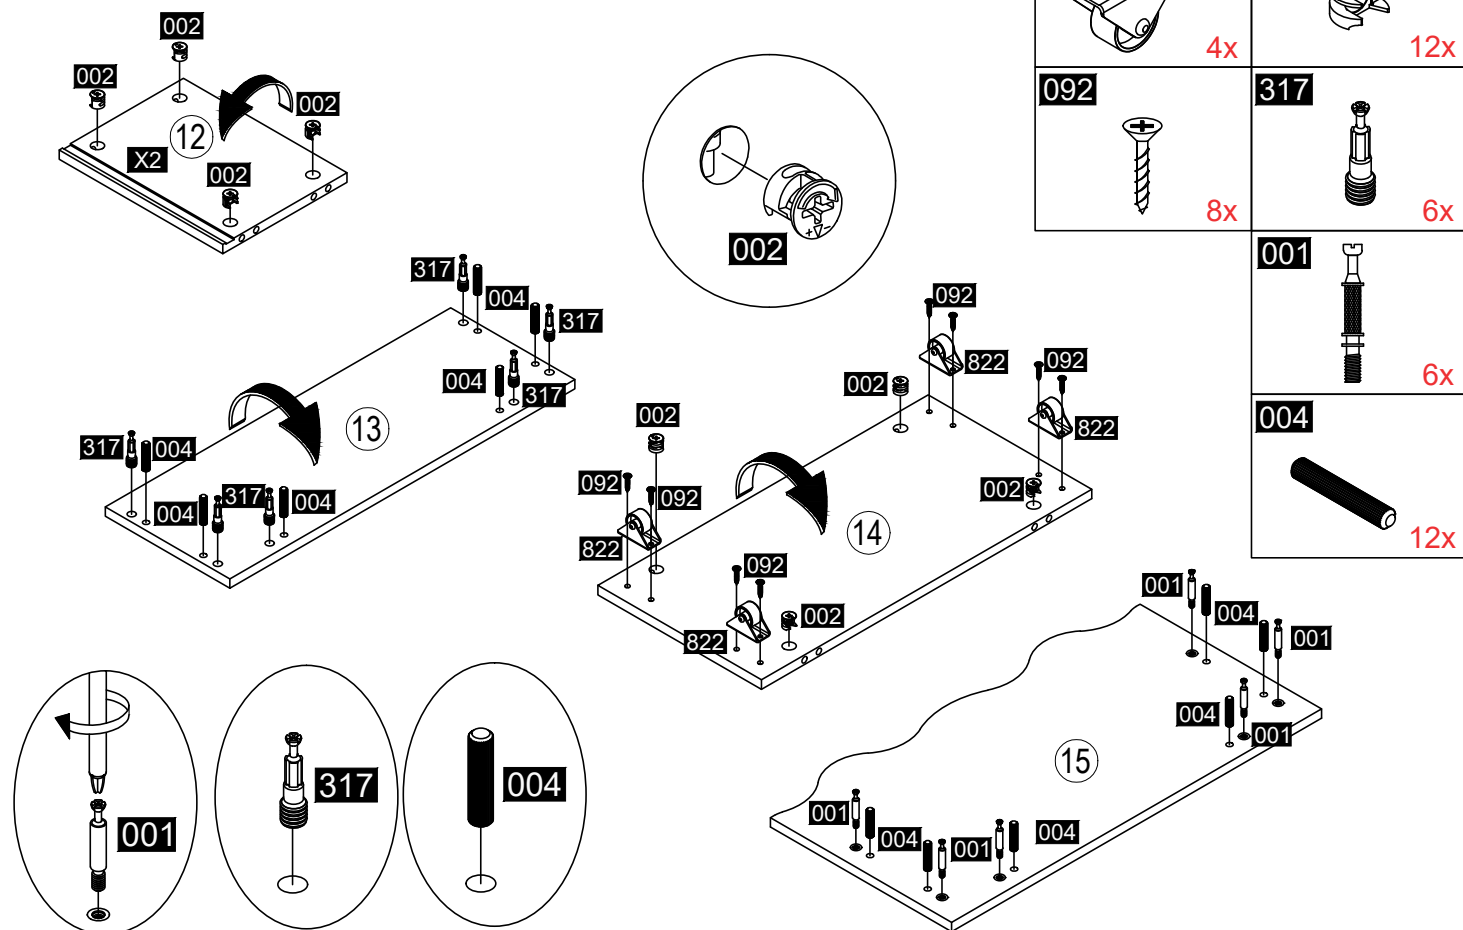

9

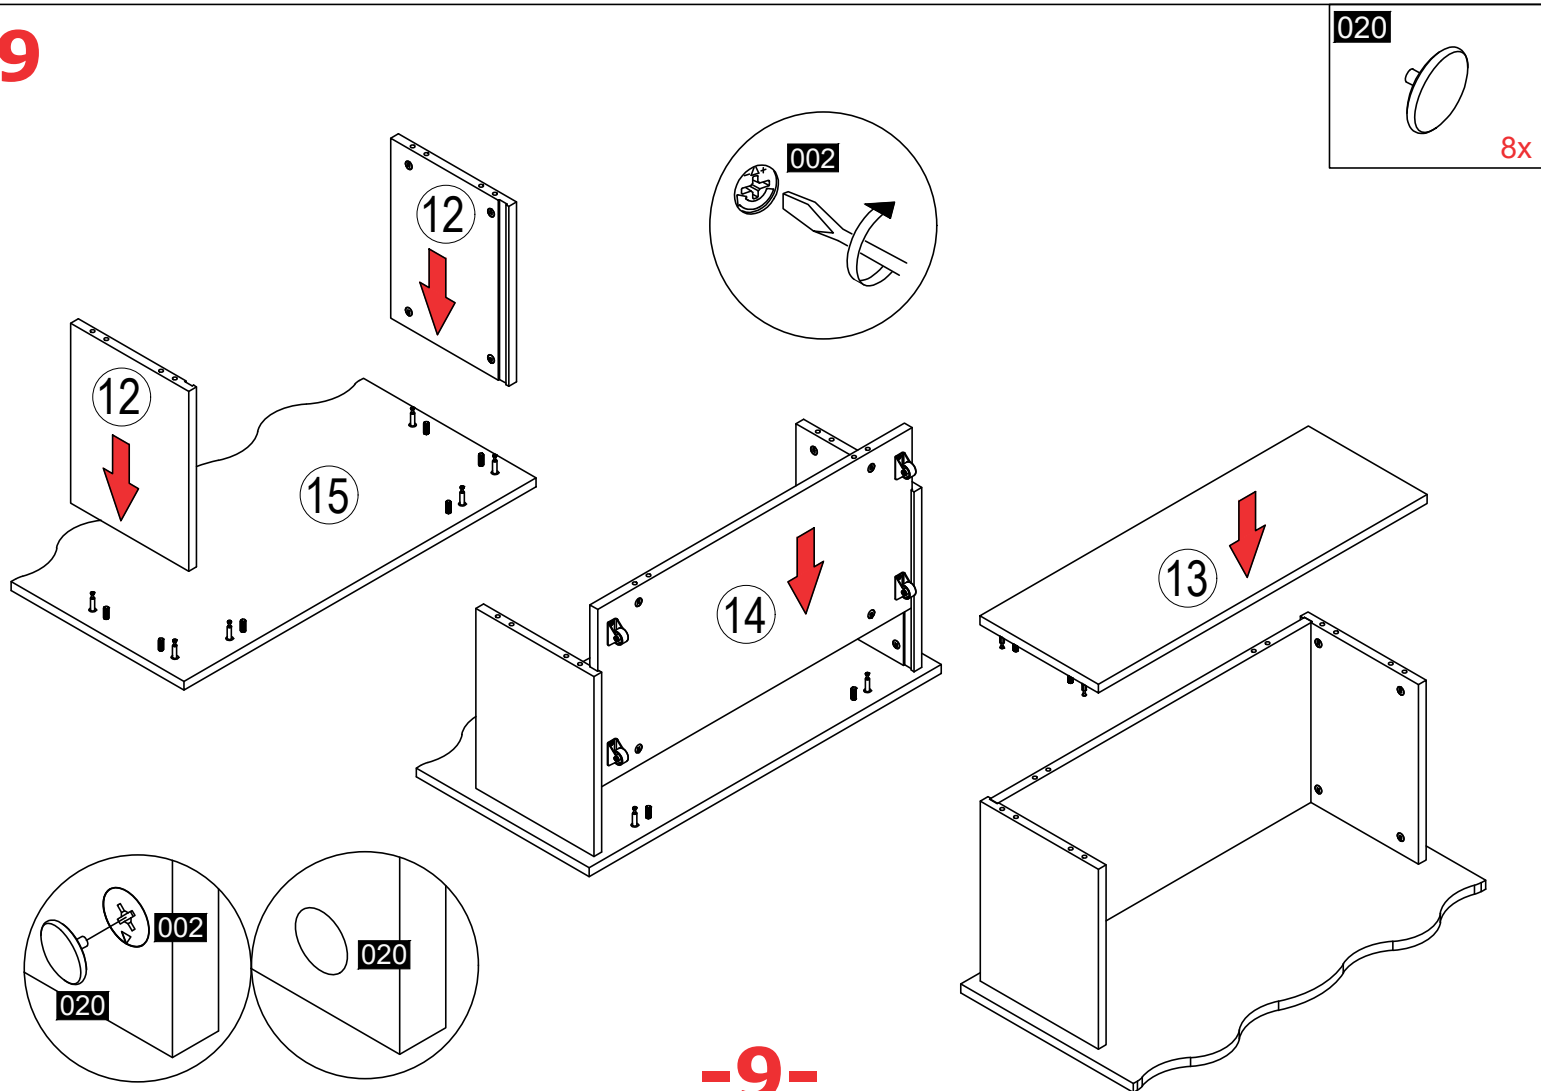 

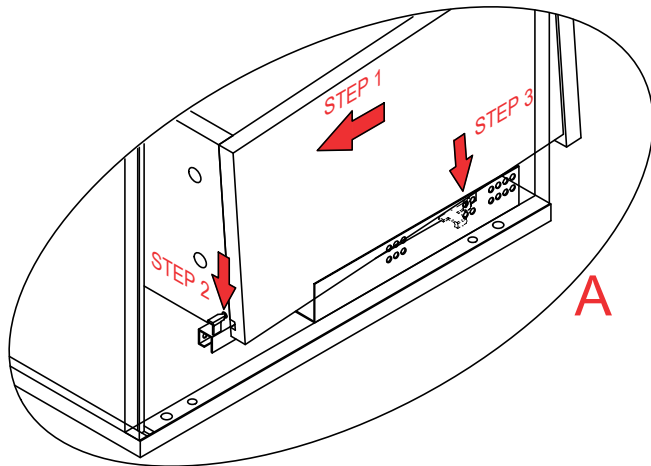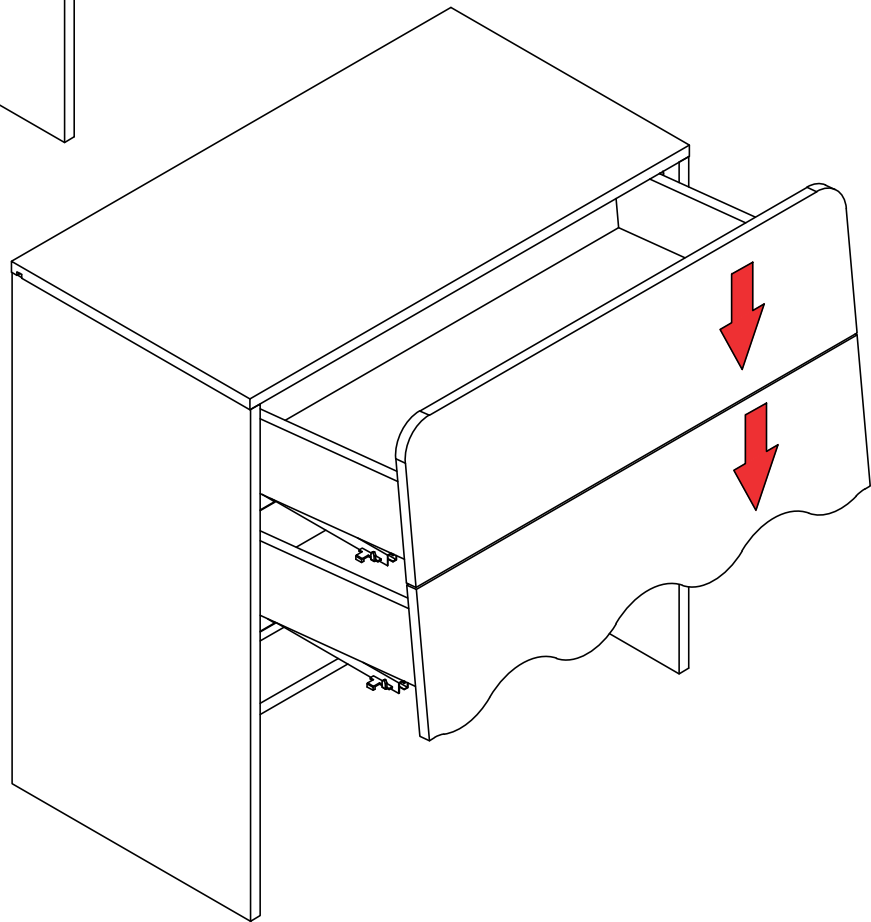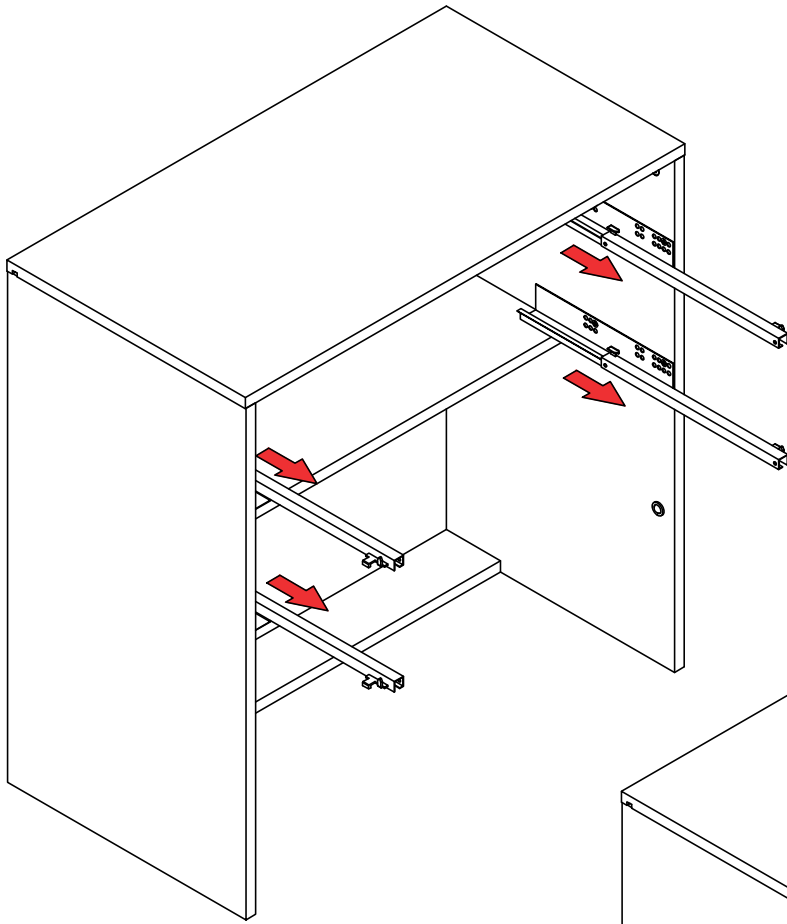   

STEP 2-3

STEP 4

STEP 5

STEP 6

